


“A” Series Variable Displacement Piston Pumps

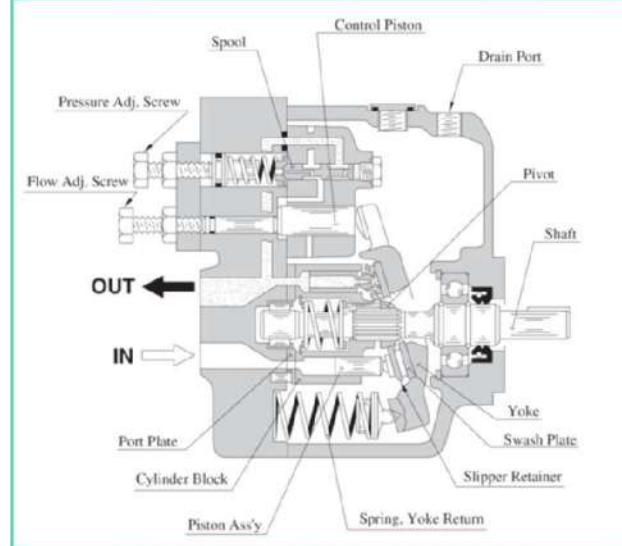


Features

- **High efficiency**

Under the conditions of pressure 160 Kgf/cm² and speed 1800 r/min. volumetric efficiency is over 98% and the overall efficiency is over 90%.

“A16” Type performance characteristics

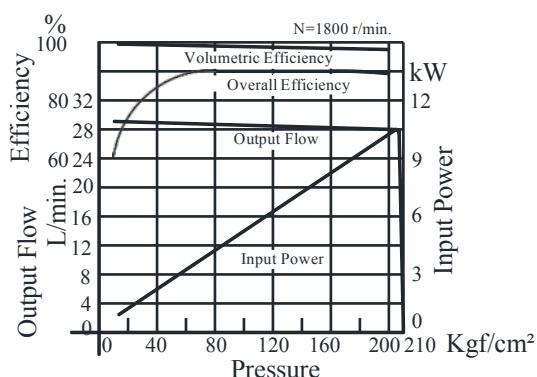


- **Accomplishment of energy saving**

Because the overall efficiency is high and the cut-off characteristics is sharp, thus the input power may be saved.

- **Low noise level**

In the “A16” pump, the noise level is as low as 57.3dB(A) [At the full cut-off pressure 210 Kgf/cm² with speed 1500 r/min. at one meter horizontally away from pump head cover.]

“A16” Type Noise level characteristics

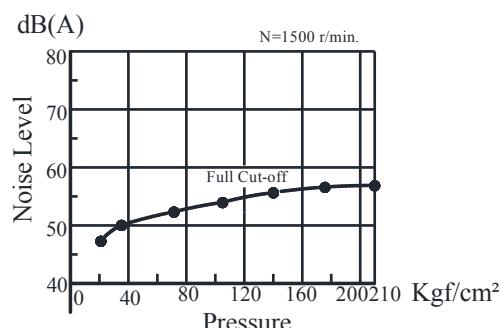

- **Low heat generation**

Because of small power loss, it is possible to reduce the rise in oil temperature. Accordingly, capacity of a reservoir can be reduced

Instructions

Hydraulic Fluids.

Use petroleum base oil such as anti-wear type hydraulic oils or R & O (Rust and oxidation inhibitor) type hydraulic oils (ISO VG 32 or 46) with a viscosity range of 20 to 400 cSt at temperature of 0-60°C both to be satisfied.

Control of contamination.

Much care should be taken to maintain control over contamination of the operating oil which can otherwise lead to breakdown and shorten the life of the unit. Please maintain the degree of contamination within NAS Grade 10.

The return line must have a line type filter of under 10µm or there should be an offline/independent filtration unit in the system.

Mounting

When installing the pump the filling port should be positioned upwards.

Alignment of Shaft.

Employ a flexible coupling whenever possible, and avoid any stress from bending thrust. Maximum permissible misalignment is less than 0.1 mm TIR and maximum permissible misangularity is less than 0.2°.

Suction Pressure.

Permissible suction pressure at inlet port of the pump is between -0.17 and +0.5 Kgf/cm² (-125 mm Hg~+0.5 Kgf/cm²). For piping to the suction port, use pipes of the same diameter as that of the specified pipe flange to be used. Make sure that the height of the pump inlet port is within one meter from the oil level in the reservoir.

Hints on Piping.

When using steel piping for the suction of discharge ports, excessive load from the piping to the pump generates excessive noise. Whenever there is fear of excessive load, please use rubber hoses.

Suction Piping.

In case the pump is installed above the oil level, the suction piping and suction line filter should be located lower than the pump position to prevent air in the suction line.

When using steel pipes for the suction or discharge ports, excessive load from the piping to the pump generates excessive noise.

Whenever there is fear of excessive load, please use rubber hoses.

Drain Piping.

Install drain piping according to the chart and ensure that pressure within the pump housing should be maintained at a normal Pressure of less than 1 Kgf/cm² and surge pressure of less than 5 Kgf/cm².

Length of piping should be less than 1 m, and the pipe end should be submerged in oil.

Recommended Drain Piping Size.

- Fix drain pipe for each side of the pump

Model Number	Fitting Size	Inside Dia. Of Pipe
A Series		
A10,A16,A22	3/8 (Inside dia. 8.5 mm or more)	ø 10 mm
A37, A45	1/2 (Inside dia. 12 mm or more)	ø 12 mm
A56,A70 A90,A100,A145	3/4 (Inside dia. 16 mm or more)	ø 19 mm

Bleeding Air.

It may be necessary to bleed air from pump case and outlet line to remove causes of vibration. An air bleed valve (Model No. ST1004-※-1080) is recommended for this purpose.

Starting.

Before starting, first time fill the pump case with clean operating oil through the fill port. In order to avoid air blockage, when first starting, adjust the control valves so that the discharged oil from the pump is returned directly to the tank or the actuator moves in a free load.

[Volume of Pre-Fill Oil Required]

Model Number	Volume cm ³
A Series	
A10	370
A16,A22	600
A37, A45, A56	1200
A70	2100
A90, A100	2500
A145	3300

Setting Discharge Pressure and Delivery

At the time of dispatch, the unit has been preset to the maximum delivery and minimum discharge pressure. Adjust the preset delivery and pressure to meet your system requirements.

- **Adjustment of Discharge Pressure**

Turning the adjustment screw clockwise, increases pressure.

**[Pressure adjusted by each one turn
of the pressure adjustment screw]**

- **Adjustment of Delivery**

Turning the delivery adjustment screw clockwise, decreases delivery.












Lock the screw after adjustment.







**[The minimum adjustable flow and adjustable
volume of each full turn of the delivery
adjustment screw]**

Model Numbers	Adjustment Pressure Kgf/cm ²
A10-FR01B	29.6
A10-FR01C/H	55.1
A16/A22/A37/A56-※-R-01-B	35.7
A16/A22/A37/A56-※-R-01-C	66.3
A16/A37/A56-※-R-01-H	80.6
A70/A90/A100/A145-※-R01B	23.4
A70/A90/A100/A145-※-R01C	32.6
A70/A90/A100/A145-※-R01H	40.8
A70/A90/A100/A145-※-R01K	47.9

Model Numbers	Adjustable Volume with each full turn of the adjustment screw cm ³ /rev.	Minimum adjustable flow cm ³ /rev.
A10	1.1	2
A16	1.4	4
A22	2	6
A37	2.9	10
A56	3.9	12
A70	4.4	30
A90	4.8	56
A100	5.2	62
A145	7.2	83

Control Type

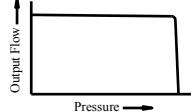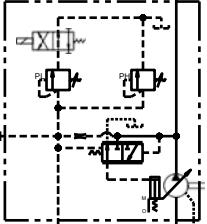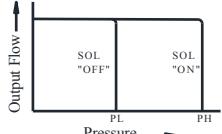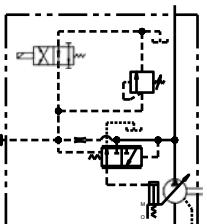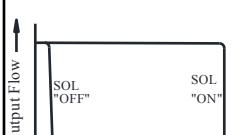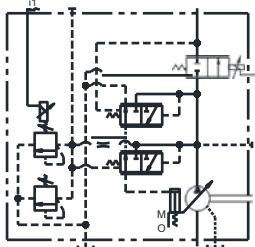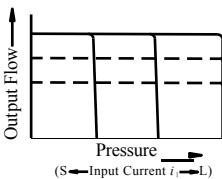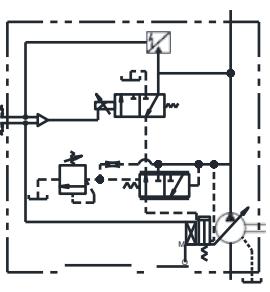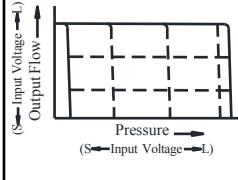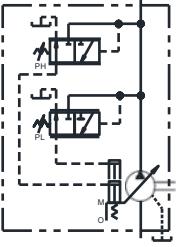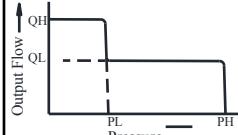Control Type	Graphic Symbols	Performance Characteristics	Explanation	Page
"01" Pressure Compensator Type			When the system pressure increases and comes close to the preset cut-off pressure, the pump flow decreases automatically while maintaining the set pressure as it is.	24
"02" ^{*1} Solenoid-two Pressure Control Type			This type of control is ideal for an application where the output power of the actuator has to be controlled in two different load pressures while keeping the actuator speed nearly constant.	*
"03" ^{*1} Pressure Compensator With Unloading Type			It is suitable for a situation where a long unloading time is required and heat generation and noise have to be kept at their lowest levels. • The pump can use in combination with the multistage pressure control valve.	*
"04" Proportional Electro Hydraulic Load Sensing Type			This is an energy saving type control which regulates the pump flow and load pressure to be at absolute minimum necessary level to operate the actuator. Pump flow rate and cut off pressure are controlled proportional to the input current to the control device on the pump and the input current is regulated by the specific amplifier.	44
"04E" Proportional Electro Hydraulic Pressure & Flow Control Type			This type of control has the pressure sensor and tilt angle sensor in the pump. The pump is used with the external amplifier. Flow and pressure can be controlled in proportion to input voltage by only one control valve. The features has been greatly improved by electrical feedback of swash plate tilt angle correspond to flow rate and load pressure to control valve. • Linearity of input characteristics is excellent and easy to set. • Hysteresis is lower, repeatability and reproducibility are fine	56
"05" ^{*1} Two-Pressure Two-Flow Control Type by System Pres.			This type of control is suitable for an application like "Presses" where the changeover from rapid advance to feed is required just when the pressing (pressurizing) starts	*

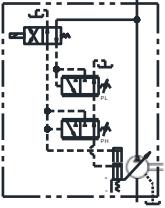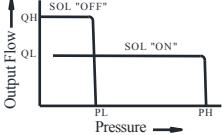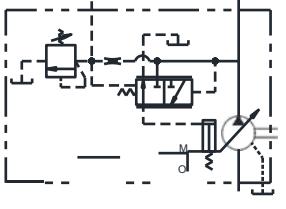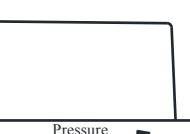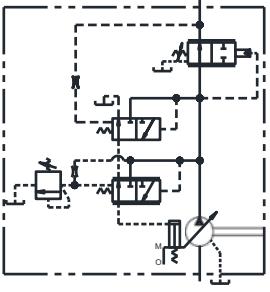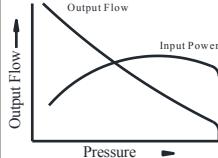Control Type	Graphic Symbols	Performance Characteristics	Explanation	Page
Two- Pressure “06” Two-Flow Control Type by Solenoid valve			This pump control is suitable for machining found on machine tool, where machining starts after the changeover from rapid advance, to feed has been made.	*
Pilot “07” Pressure Control type Pressure Compensator			The pump is used in combination with the pilot relief valve or multistage pressure control valve. By controlling the pilot pressure, the full cut-off pressure can be remote-controlled according to the requirements.	*
Constant “09” ^{*1} Power Control Type			<ul style="list-style-type: none"> Pump input power can be controlled in accordance with the motor output. When the discharge pressure raises, the output flow decreases corresponding to the preset input power. The pump can act for function of 2 pumps, low pressure large-flow and high-pressure small-flow. Therefore, the motor capacity can be reduced. 	*

* Control Type “01”, “04” & “04E” are shown in catalogue. Contact CNIP for the details of other control type

^{*1} Please check CNIP KOGYO.CO.LTD website or catalogue for more details

Availability of Control Type


Mark “O” in the table below refers to standard model.

Model Numbers	Geometric Displacement cm ³ /rev.	Control Type								
		01	02	03	04	04E	05	06	07	09
A10	10.0	O							O	
A16	15.8	O	O	O	O	O	O	O	O	O
A22	22.2	O	O	O	O	O		O	O	
A37	36.9	O	O	O	O	O	O	O	O	O
A45	45.0				O					
A56	56.2	O	O	O	O	O	O	O	O	O
A70	70.0	O	O	O	O	O		O	O	O
A90	91.0	O	O	O	O	O		O	O	
A100	100.0	O			O	O				
A145	145.0	O	O	O	O	O		O	O	O

“A” Series Variable Displacement Piston Pumps-Single Pump, Pressure Compensator Type



Graphic Symbol

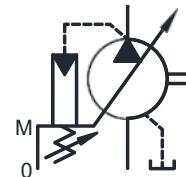


Specifications

Model Numbers	Geometric Displacement cm ³ /rev.	Minimum Adj. Flow cm ³ /rev	Operating Pressure Kgf/cm ²		Shaft Speed Range r/min.		Approx. Mass Kg.	
			Rated *2	Intermittent *1	Max.	Min.	Flange Mtg.	Foot Mtg.
A10-FR01B-12	10.0	2.0	160	210	1800	600	5.1	-
A10-FR01C/H-12							8.5	
A16-※-R-01-※-※-K-32	15.8	4	160	210	1800	600	16.5	18.7
A22-※-R-01-※-※-K-32	22.2	6	160	160	1800	600	16.5	18.7
A37-※-R-01-※-※-K-32	36.9	10	160	210	1800	600	28.0	32.3
A56-※-R-01-※-※-K-32	56.2	12	160	210	1800	600	35.0	39.3
A70-※R01※S-60	70.0	30	250	280	1800	600	58.5	70.5
A90-※R01※S-60	91.0	56	250	280	1800	600	72.5	93
A100-※R01※S-10	100.0	62	210	210	1800	600	72.5	93
A145-※R01※S-60	145.0	83	250	280	1800	600	92.5	117.5

*1 Whenever setting pressure, make sure the full cut off pressure never exceeds the maximum intermittent pressure.

*2 Care should be taken in case of used at a higher pressure than the rated pressure, because operating terms may be restricted. For example, if used as per maximum illustrated operating conditions, intermittent time at maximum flow is restricted to under 1/5 of one cycle time and under 6 seconds simultaneously. Conditions may vary according to the actual working pressure and delivery (inclination angle of swash plate). Consult factory or CNIP sales representative for further information.

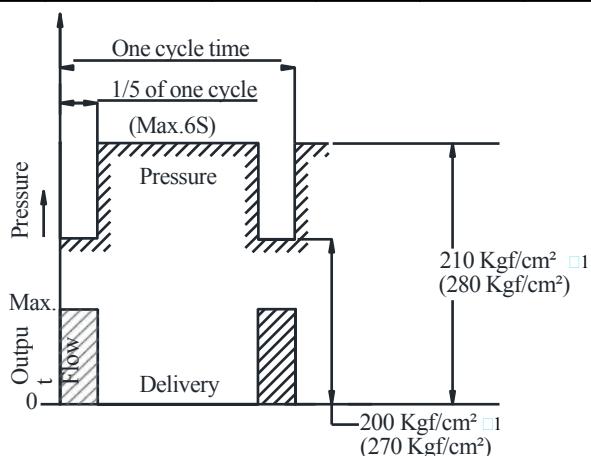

□1 Applicable only for A70/A90/A145

Model Number Designation

A16	-F	-R	-01	-B	-S	-K	-32
Series Number	Mounting	Direction of Rotation	Control Type	Pres. Adj. Range Kgf/cm ²	Port Position	Shaft Extension	Design Number
A16 (15.8 cm ³ /rev.)	F: Flange Mounting L: Foot Mounting	(Viewed from Shaft End) R: Clockwise (Normal) ^{*1}	01: Pressure Compensator Type	B: 12 ~ 70 C: 12 ~ 160 H: 12 ~ 210	None: Axial Port S: Side Port	K: Keyed Shaft	32
A22 (22.2 cm ³ /rev.)				B: 12 ~ 70 C: 12 ~ 160			32
A37 (36.9 cm ³ /rev.)				B: 12 ~ 70 C: 12 ~ 160 H: 12 ~ 210			32
A56 (56.2 cm ³ /rev.)							32

A70	-F	R	01	B	S	-60
Series Number	Mounting	Direction of Rotation	Control Type	Pres. Adj. Range Kgf/cm ²	Port Position	Design Number
A10 (10.0 cm ³ /rev.)	F: Flange Mounting			B: 12 ~ 70 C: 20 ~ 160 H: 20 ~ 210	-----	12
A70 (70.0 cm ³ /rev.)	F: Flange Mounting L: Foot Mounting	(Viewed from Shaft End) R: Clockwise (Normal) ^{*1}	01: Pressure Compensator Type	B: 12 ~ 70	S: Side Port	60
A90 (91.0 cm ³ /rev.)				C: 15 ~ 160		60
A100 (100 cm ³ /rev.)				H: 18 ~ 214 K: 20 ~ 286		10
A145 (145 cm ³ /rev.)						60

^{*1} Pumps with ‘counterclockwise’ direction are available. Consult CNIP for details.

^{*2} When A10 pump is used as the foot mounting, order the mounting bracket kit shown below separately.
Ref. to page 18 for dimensions of the mounting bracket.

Note: The mounting bracket-kit consists of Mounting Bracket, 2 hex. Bolts and 2 Plain Washers.

Mounting Bracket Kit Numbers	Approx. Mass Kg.
LP-1A-10	2.2

Pipe Flange Kits.

Pipe flange kits are available. When ordering, specify kit number from the table below.

Pump Model Numbers	Port Name	Pipe Flange Kit Numbers. ^{*1}	
		Threaded Connection	Socket Welding
A16-※-R-01	Suction	F5-06-A-10	F5-06-B-10
	Discharge	F5-06-A-10	F5-06-B-10
A37-※-R-01	Suction	F5-10-A-10	F5-10-B-10
	Discharge	F5-10-A-10	F5-10-B-10
A70-※ R01	Suction	F5-12-A-10	F5-12-B-10
	Discharge	F5-08-A-10	F5-08-B-10
A90-※ R01	Suction	F5-16-A-10	F5-16-B-10
	Discharge	F5-10-A-10	F5-10-B-10
A100-※ R01			
A145-※ R01			


^{*1} Details of pipe flange kits are described in EIC-L-1001.

“A” Series Variable Displacement Piston Pumps


Single pump, Pressure Compensator Type

Typical Performance Characteristics of Type "A10" Oil Viscosity 20cSt [ISO VG 32, 50° C]


Performance Characteristic Curve

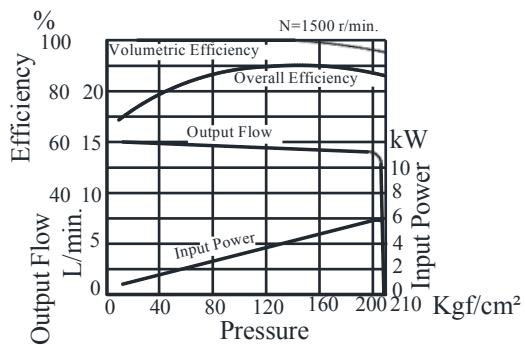

Input Power

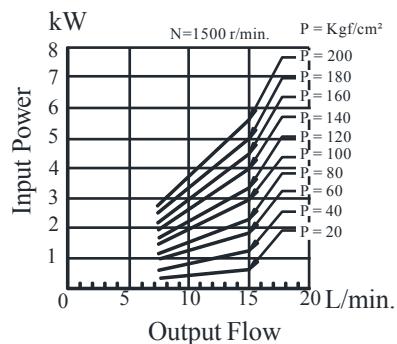


Full Cut-off Power

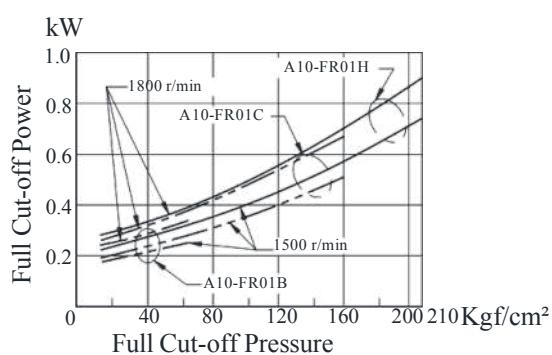


Noise Level

[One meter horizontally away from pump head cover]

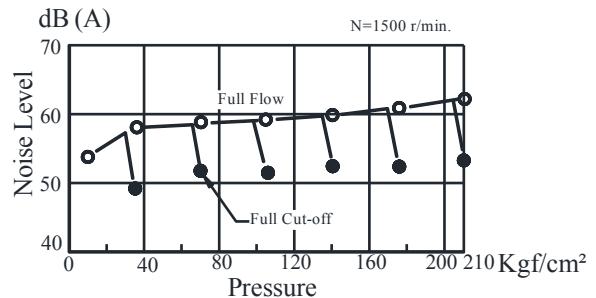

Drain

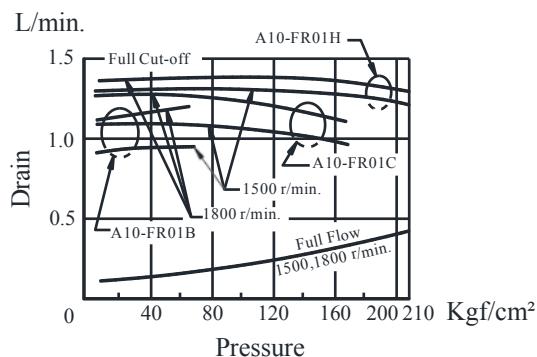


"A" Series Variable Displacement Piston Pumps
Single pump, Pressure Compensator Type

Typical Performance Characteristics of Type "A16" Oil Viscosity 20cSt [ISO VG 32, 50° C]

A

"A" Series Variable
Displacement Piston Pumps


Performance Characteristic Curve

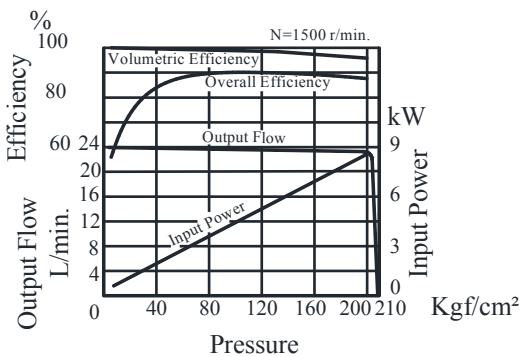


Input Power

Example: At a pressure of 100 Kgf/cm², a flow 20 L/min. & speed 1500 r/min. the axial input becomes about 3.7kW. as shown the dotted line in the graph

kW

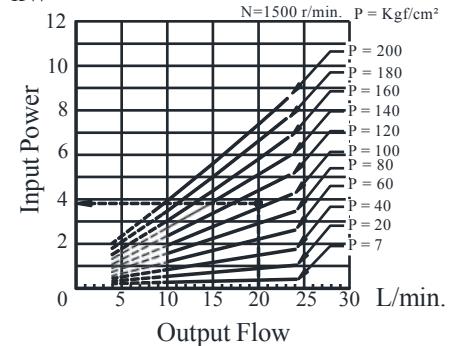


Full Cut-off Power

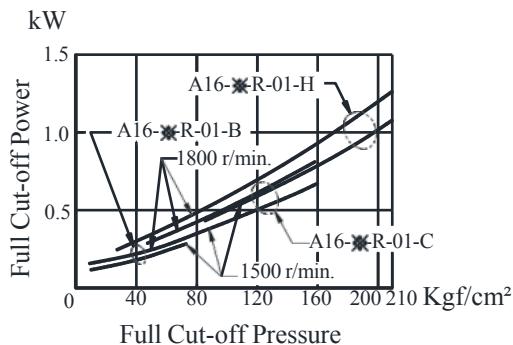


Noise Level

[One meter horizontally away from pump head cover]

dB (A)

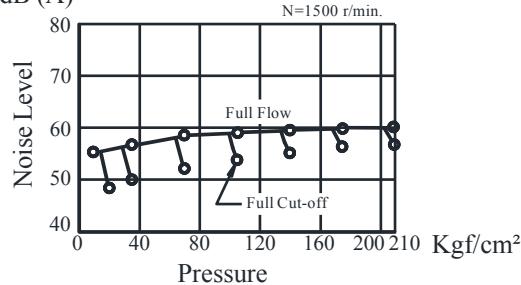


Drain

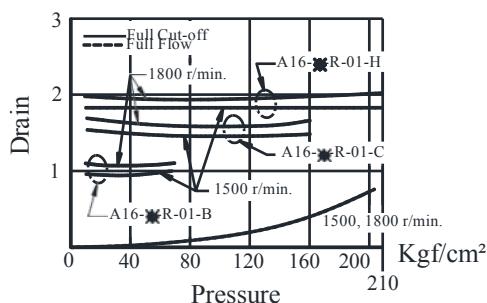


Typical Performance Characteristics of Type "A22" Oil Viscosity 20cSt [ISO VG 32, 50° C]

Performance Characteristic Curve

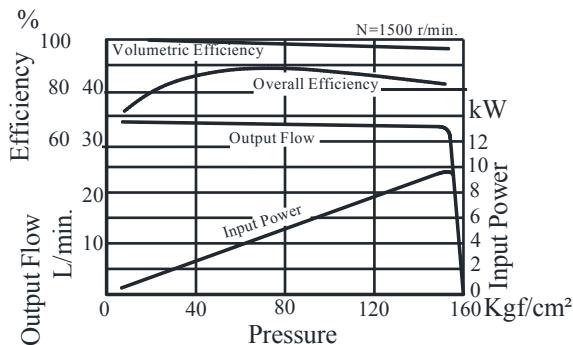


Input Power

Example: At a pressure of 100 Kgf/cm², a flow 30 L/min. & speed 1500 r/min. the axial input becomes about 5.4kW. as shown the dotted line in the graph

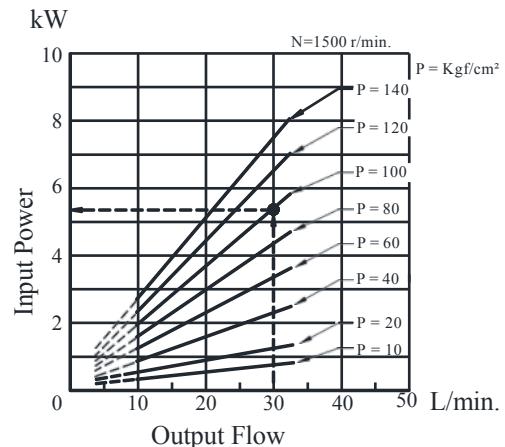


Full Cut-off Power

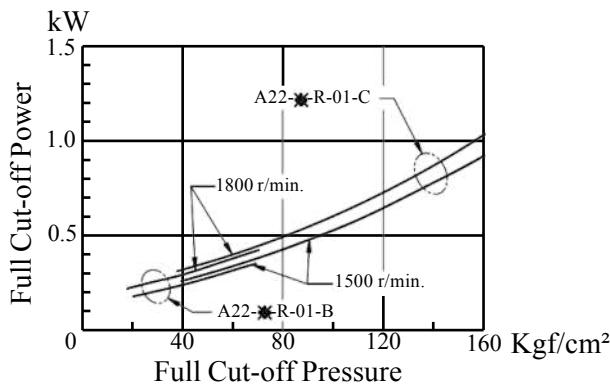


Noise Level

[One meter horizontally away from pump head cover]

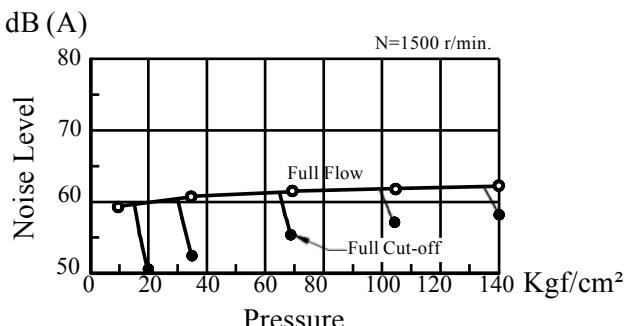

Drain

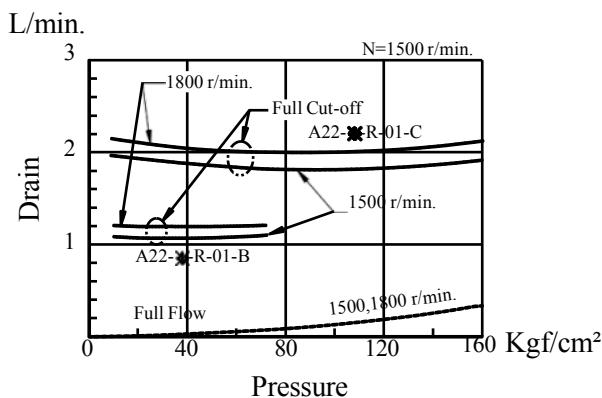


Typical Performance Characteristics of Type "A37" Oil Viscosity 20cSt [ISO VG 32, 50° C]

A


"A" Series Variable
Displacement Piston Pumps

Performance Characteristic Curve

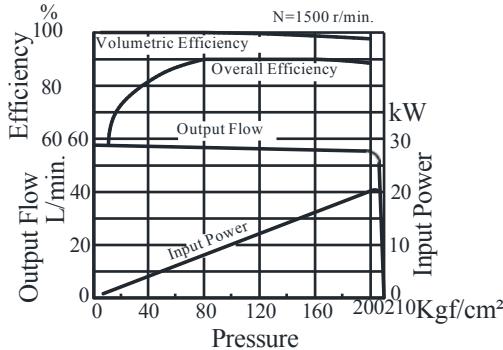


Input Power

Example: At a pressure of 160 Kgf/cm², a flow 45 L/min. & speed 1500 r/min. the axial input becomes about 12.6kW. as shown the dotted line in the graph

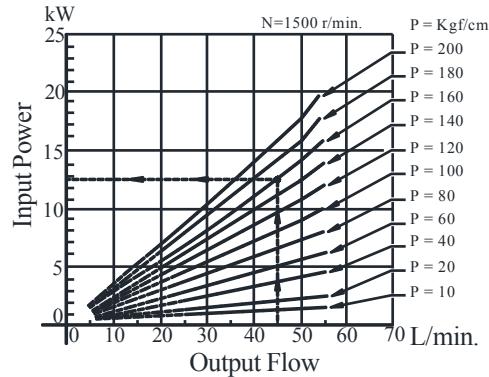


Full Cut-off Power

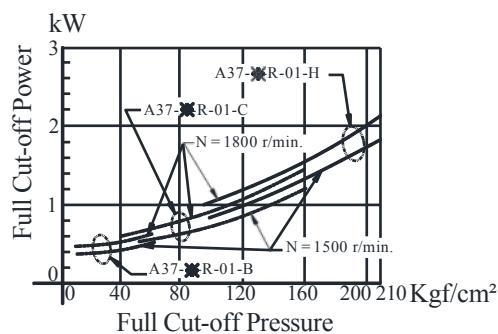


Noise Level

[One meter horizontally away from pump head cover]

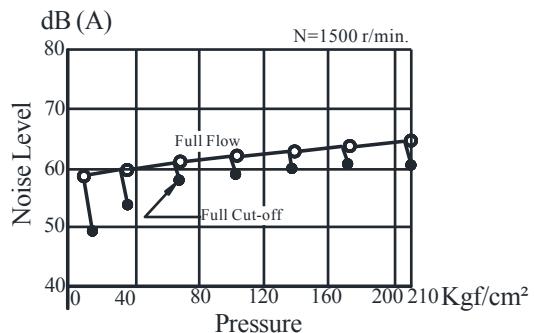


Drain

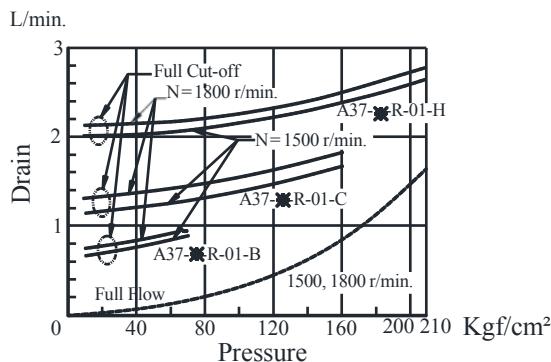


Typical Performance Characteristics of Type "A56" Oil Viscosity 20cSt [ISO VG 32, 50° C]

Performance Characteristic Curve

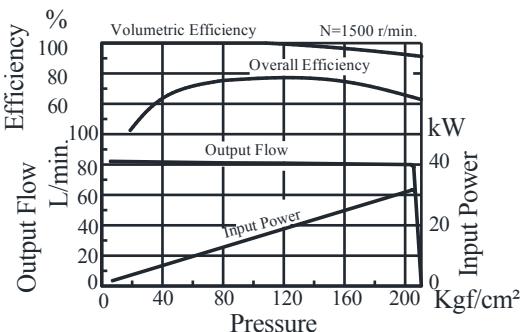


Input Power

Example: At a pressure of 160 Kgf/cm², a flow 70 L/min. & speed 1500 r/min. the axial input becomes about 20.8kW, as shown the dotted line in the graph

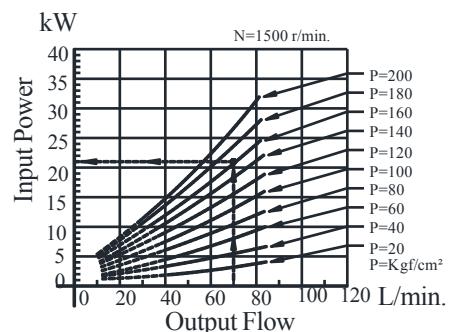


Full Cut-off Power

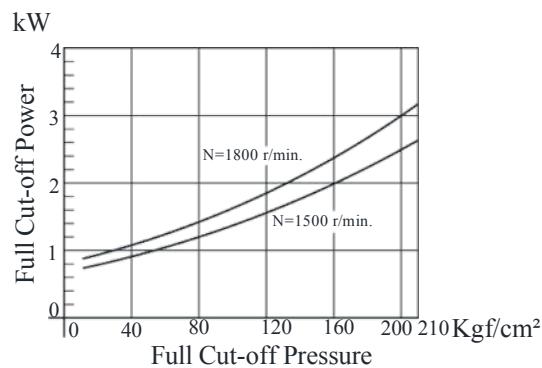


Noise Level

[One meter horizontally away from pump head cover]

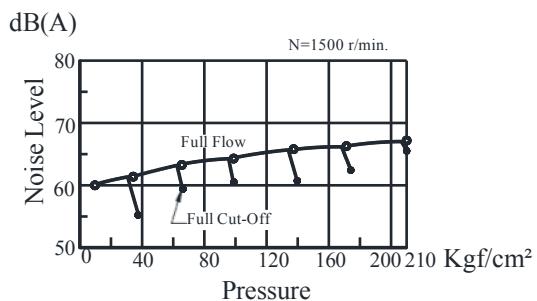

Drain

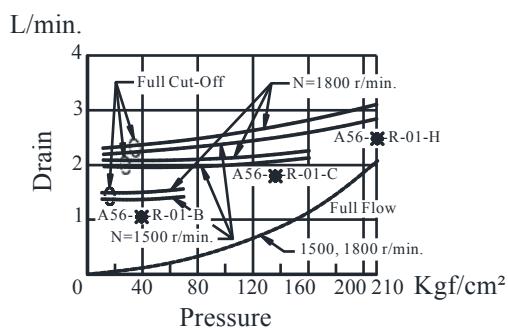


Typical Performance Characteristics of Type "A70" Oil Viscosity 32cSt [ISO VG 32, 50° C]

A


"A" Series Variable
Displacement Piston Pumps

Performance Characteristic Curve

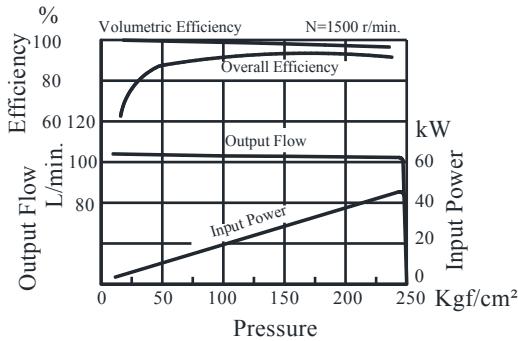


Input Power

Example: At a pressure of 200 Kgf/cm², a flow 70 L/min. & speed 1500 r/min. the axial input becomes about 26kW. as shown the dotted line in the graph

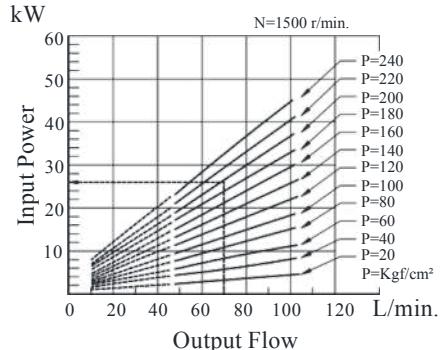


Full Cut-off Power

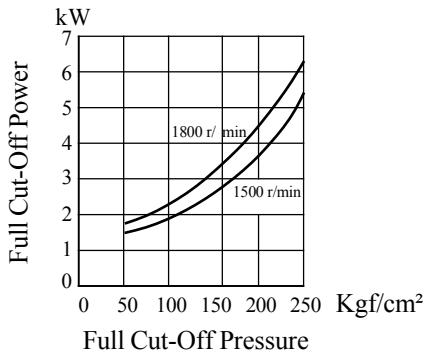


Noise Level

[One meter horizontally away from pump head cover]

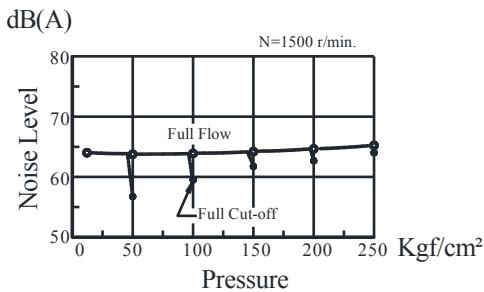


Drain

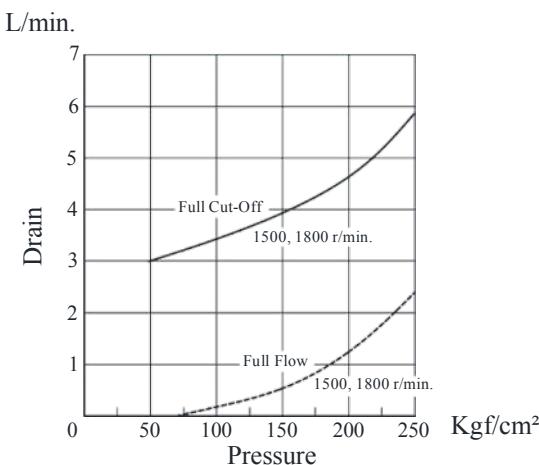


Typical Performance Characteristics of Type "A90" Oil Viscosity 32cSt [ISO VG 32, 50° C]

Performance Characteristic Curve

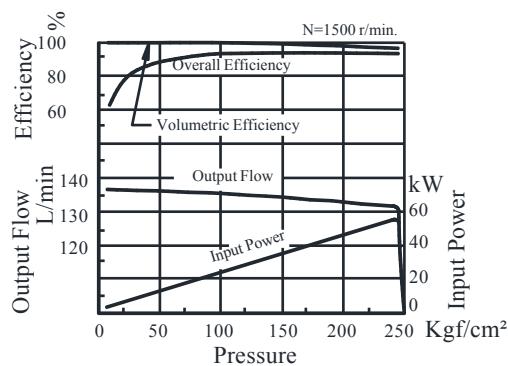


Input Power

Example: At a pressure of 180 Kgf/cm², a flow 110 L/min. & speed 1500 r/min. the axial input becomes about 34kW. as shown the dotted line in the graph

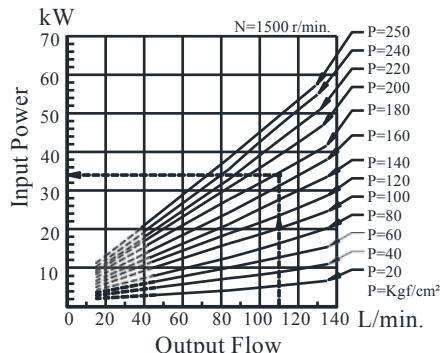


Full Cut-off Power

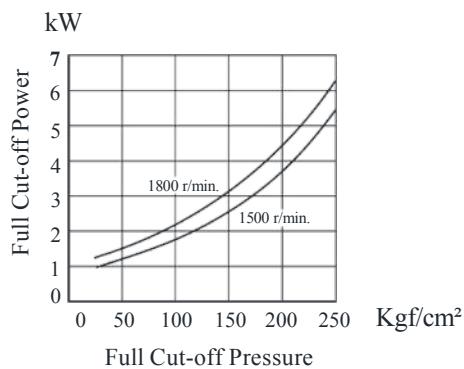


Noise Level

[One meter horizontally away from pump head cover]

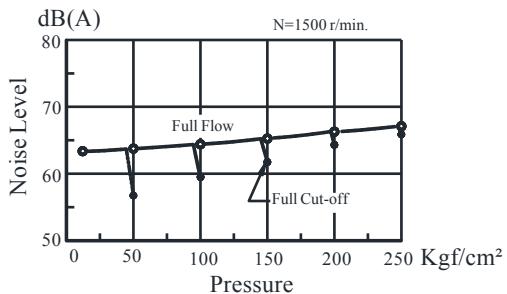

Drain

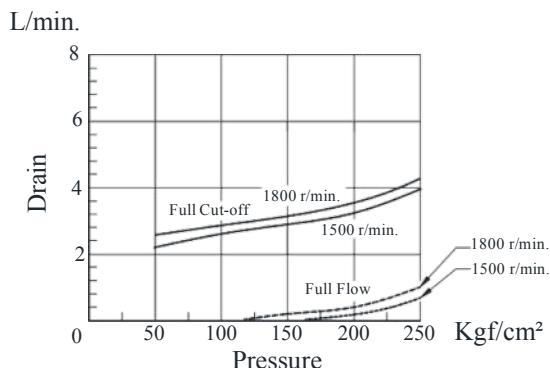


"A" Series Variable Displacement Piston Pumps
Single pump, Pressure Compensator Type

Typical Performance Characteristics of Type "A100" Oil Viscosity 32cSt [ISO VG 32, 50° C]

A


"A" Series Variable
Displacement Piston Pumps

Performance Characteristic Curve

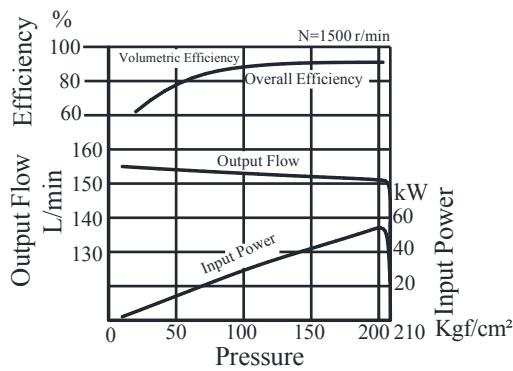


Input Power

Example: At a pressure of 160 Kgf/cm², a flow 110 L/min. & speed 1500 r/min. the axial input becomes about 34kW. as shown the dotted line in the graph

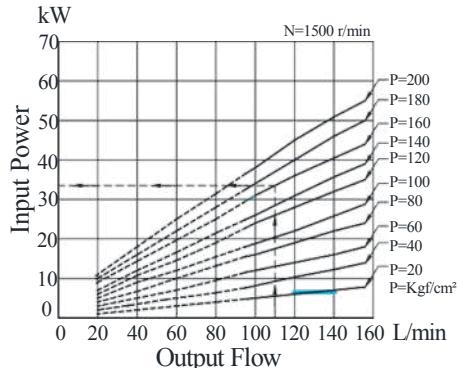


Full Cut-off Power

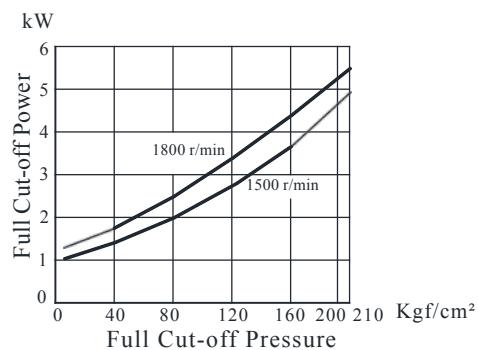


Noise Level

[One meter horizontally away from pump head cover]

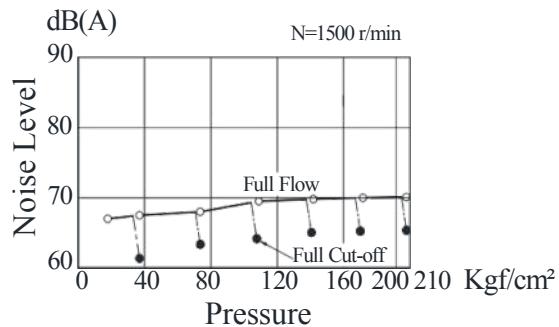


Drain

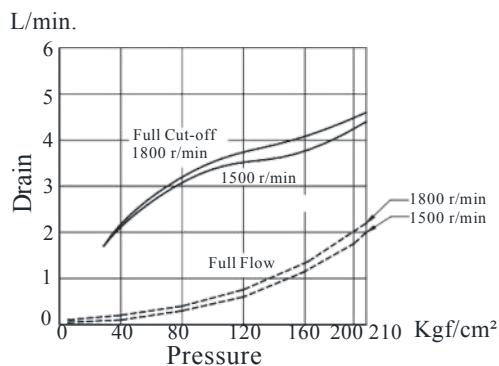


Typical Performance Characteristics of Type "A145" Oil Viscosity 32cSt [ISO VG 32, 50° C]

Performance Characteristic Curve

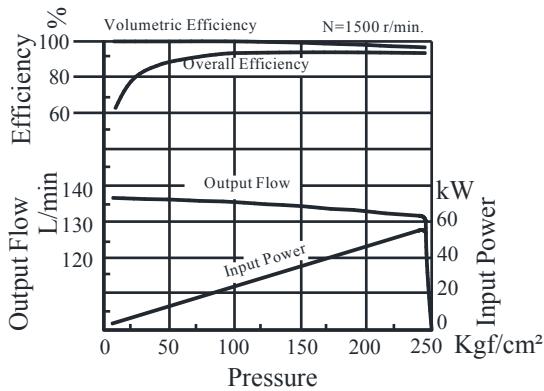


Input Power

Example: At a pressure of 200 Kgf/cm², a flow 180 L/min. & speed 1500 r/min. the axial input becomes about 64kW. as shown the dotted line in the graph

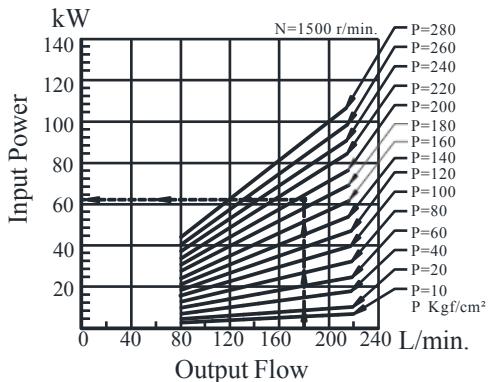


Full Cut-off Power

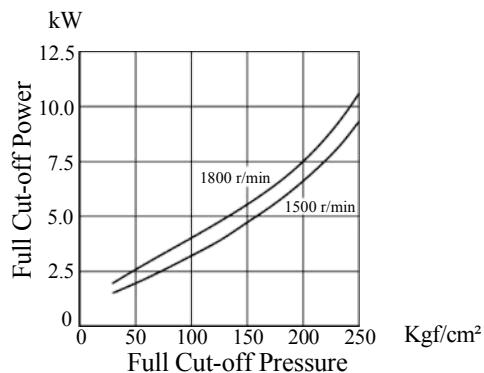


Noise Level

[One meter horizontally away from pump head cover]

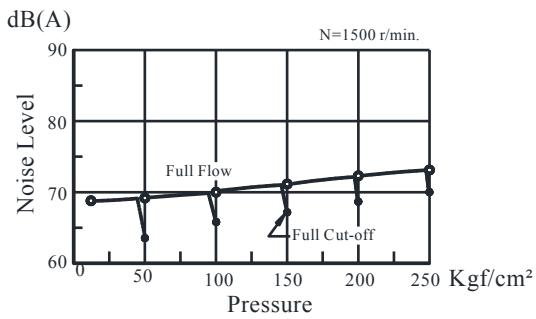


Drain

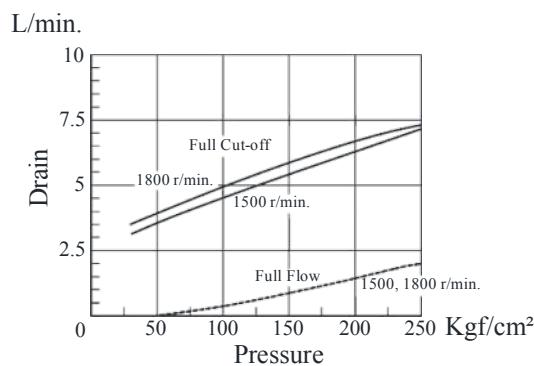

"A" Series Variable Displacement Piston Pumps
Single pump, Pressure Compensator Type

A10-FR01C-H-12

- Flange Mounting

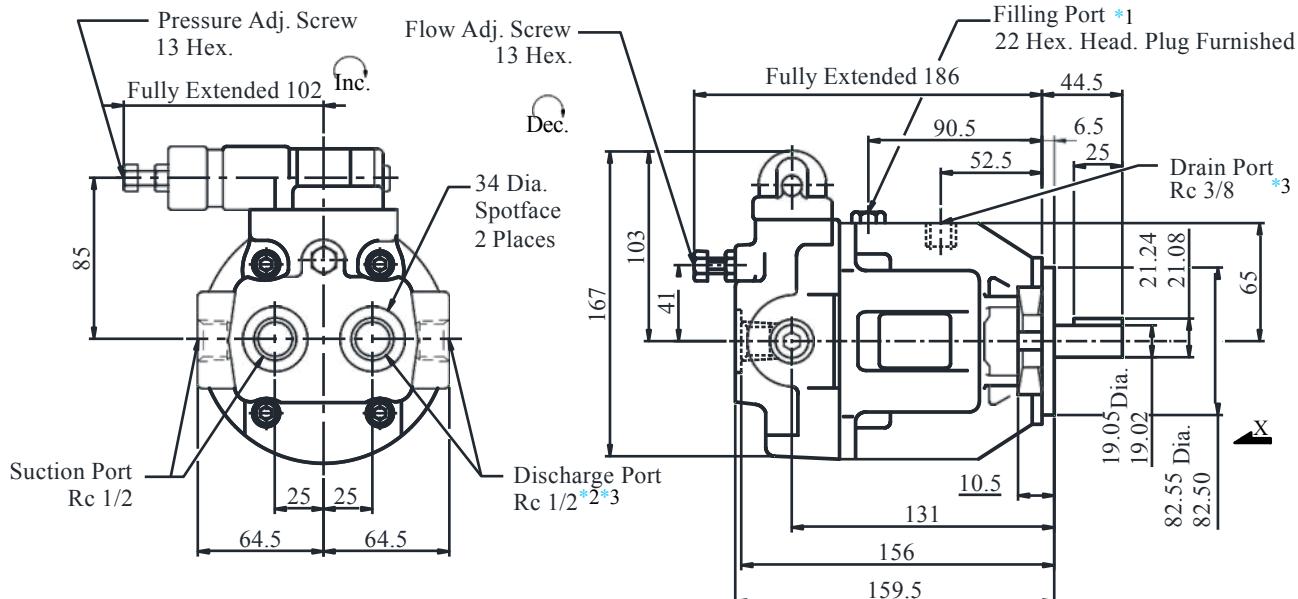


*1 Install the pump so that the "Filling Port" is at the top.

*2 Use either port of two suction and discharge ports at your option. Keep the remaining ports plugged.

*3 As the tightening torques of suction, discharge and drain Port fittings, conform to the below.


Model Numbers	Tightening Torque Kgf-m	
	Suction Port & Discharge Port	Drain Port
A10-FR01B/C/H-12	6.5~7.5	4.0~5.0

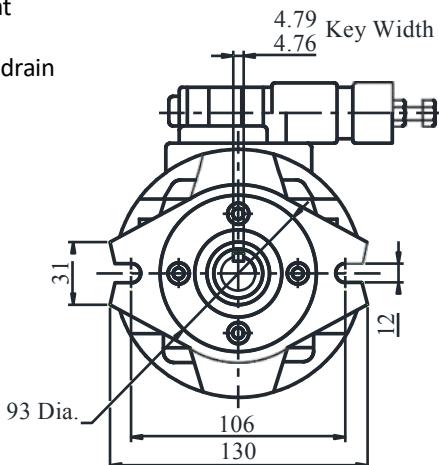

View Arrow X

A10-FR01B-12

- Flange Mounting

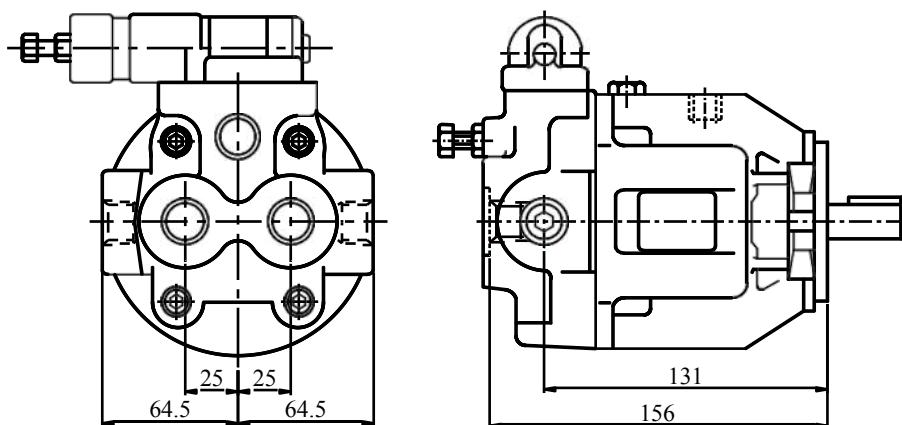

* For other dimensions, refer to above Pressure adj. range "C" & "H".

"A" Series Variable Displacement Piston Pumps
Single pump, Pressure Compensator Type


A

**"A" Series Variable
Displacement Piston Pumps**


PISTON PUMPS

- A16-F-R-01-※-K-32
- A22-F-R-01-※-K-32


- Flange Mounting

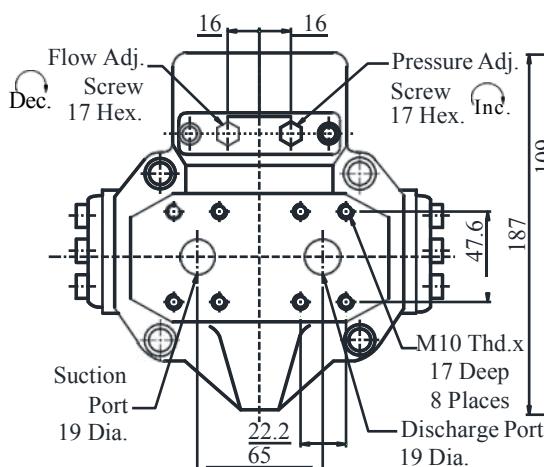

Axial Port Type

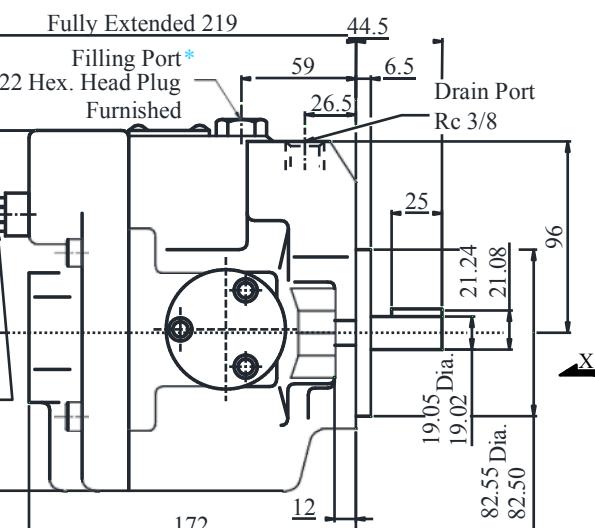


* Install the pump so that the "Filling Port" is at the top.

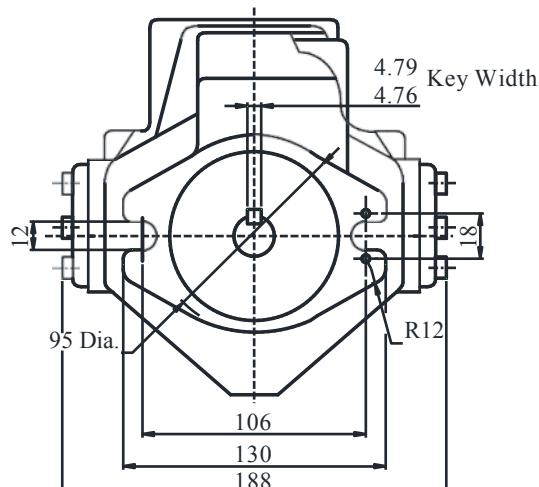

View Arrow X


- A16-F-R-01-※-S-K-32
- A22-F-R-01-※-S-K-32

- Flange Mounting

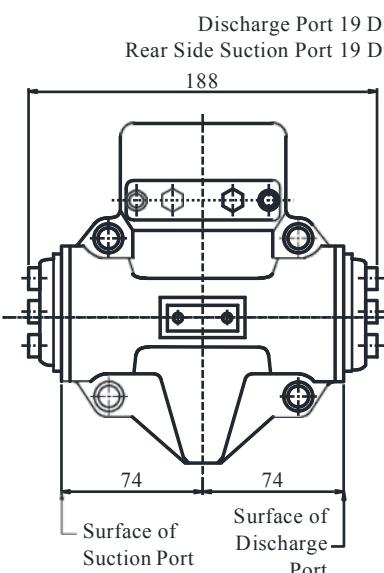

Side Port Type

DIMENSIONS IN MILLIMETRES

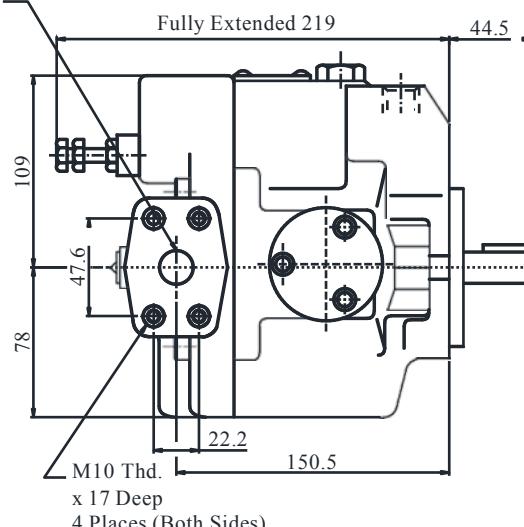

- Foot Mounting type

Note : For Foot Mounting Type refer page no. 48.


"A" Series Variable Displacement Piston Pumps
Single pump, Pressure Compensator Type

PISTON PUMPS

A37-F-R-01-※-K-32


- Flange Mounting

Axial Port Type

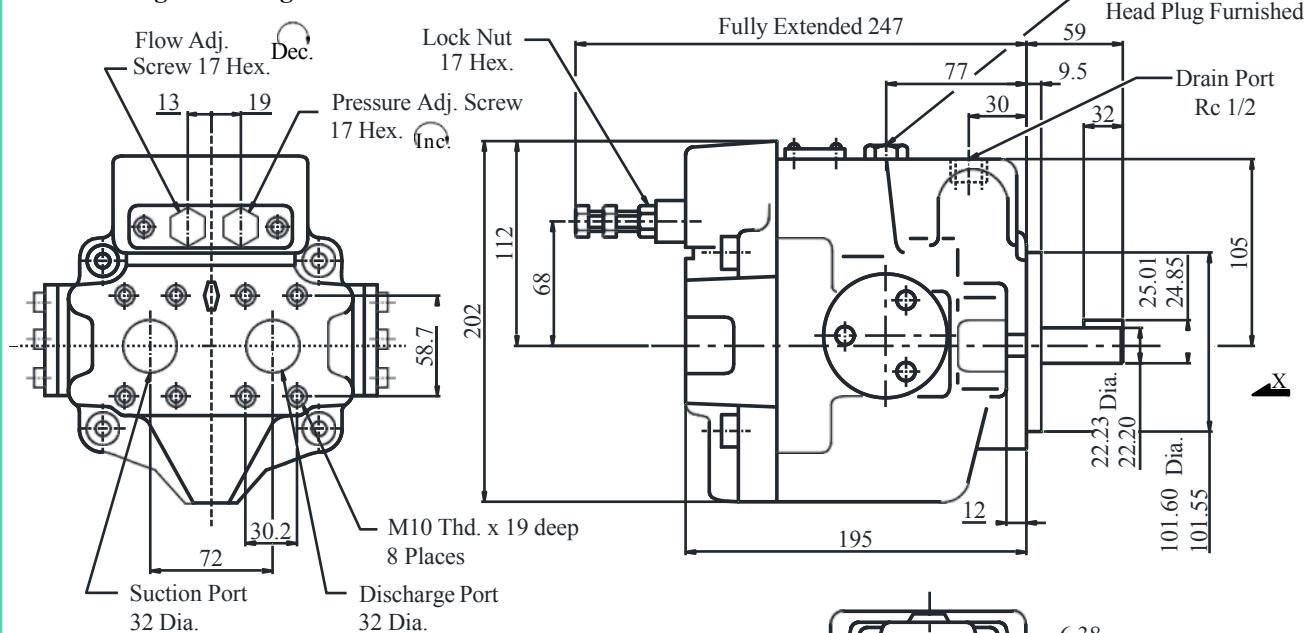

DIMENSIONS IN
MILLIMETRES

*Install the pump so that the "Filling Port" is at the top.

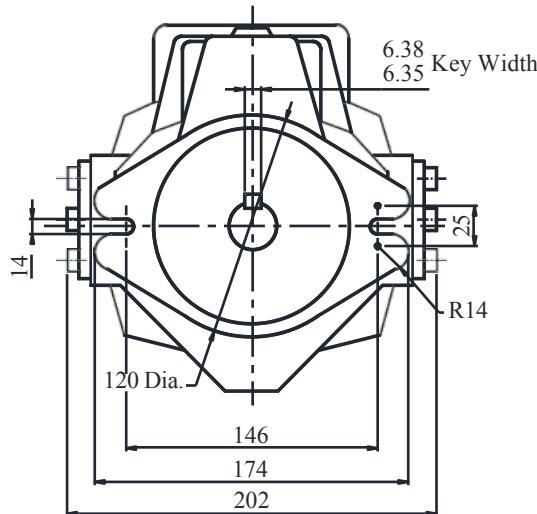

View Arrow X


A37-F-R-01-※-S-K-32

Side Port Type

- Flange Mounting

Discharge Port 32 Dia.

Rear Side Suction Port 32 Dia.

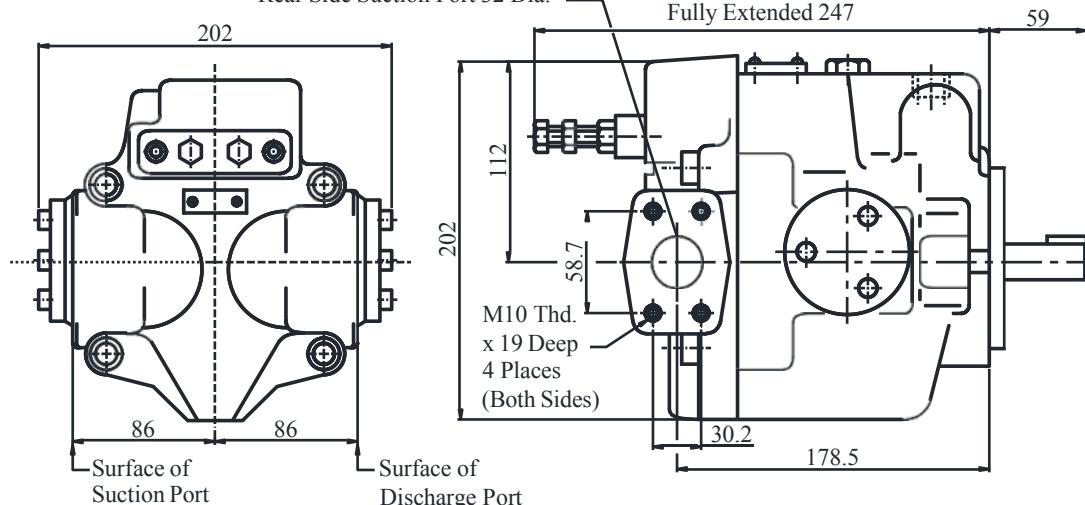

- Foot Mounting type

Note : For Foot Mounting Type refer page no. 49.


"A" Series Variable Displacement Piston Pumps
Single pump, Pressure Compensator Type

A


**"A" Series Variable
Displacement Piston Pumps**

A56-F-R-01-※-K-32

- Flange Mounting

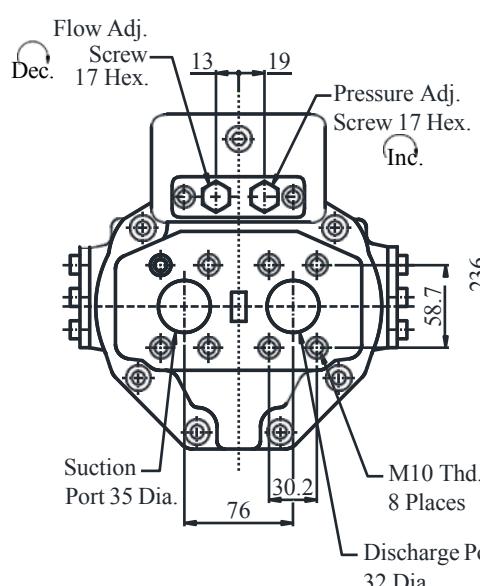

Axial Port Type

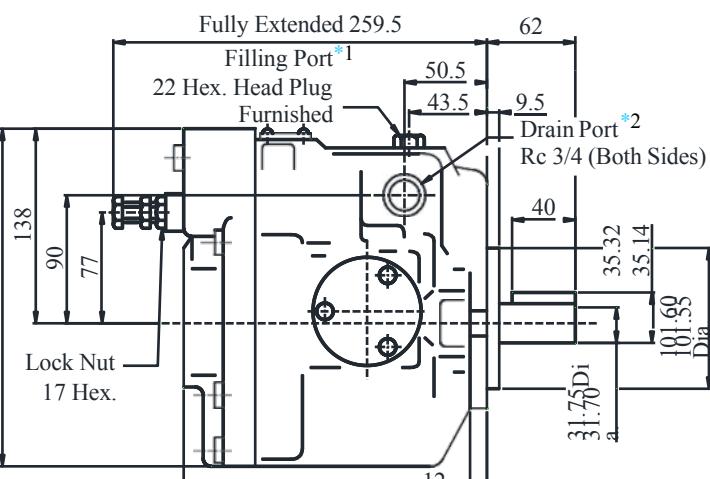


DIMENSIONS IN MILLIMETRES

^{*1} Install the pump so that the "Filling Port" is at the top.

^{*2} Use either port of two drain ports at your options.


Keep the remaining ports plugged.

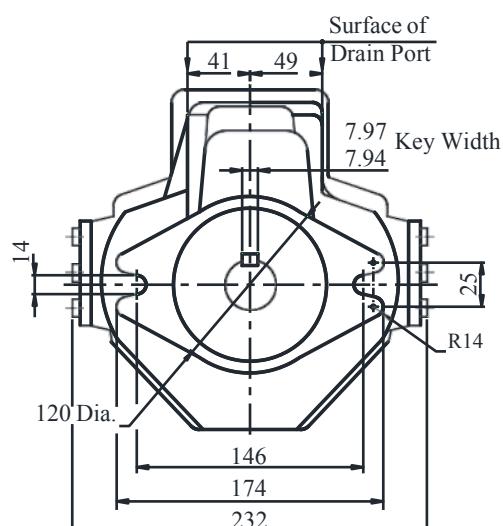


A56-F-R-01-※-K-32

- Flange Mounting

Discharge Port 32 Dia.
Rear Suction Port 35 Dia.

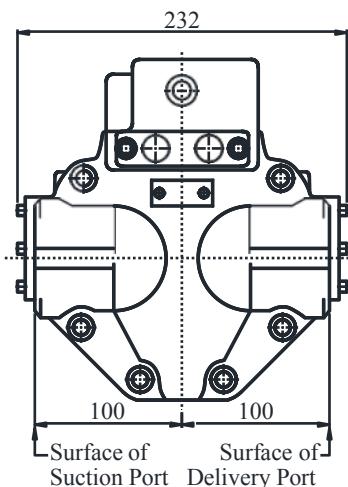

Side Port Type

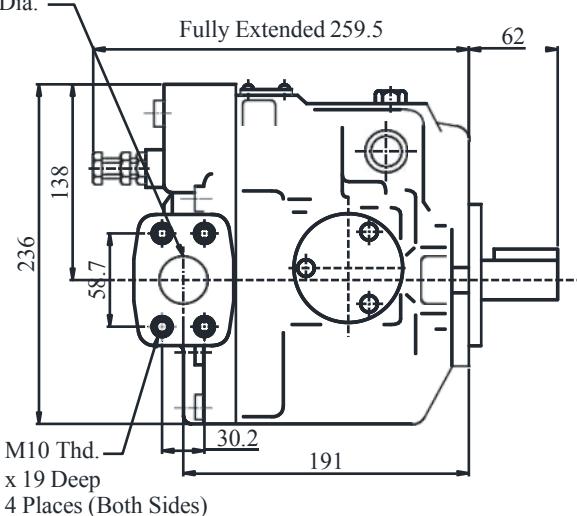

• Foot Mounting type

Note : For Foot Mounting Type refer page no. 51.

"A" Series Variable Displacement Piston Pumps
Single pump, Pressure Compensator Type

A70-FR01※-S-60




Side Port Type

DIMENSIONS IN
MILLIMETRES

- Flange Mounting

A

“A” Series Variable
Displacement Piston Pumps

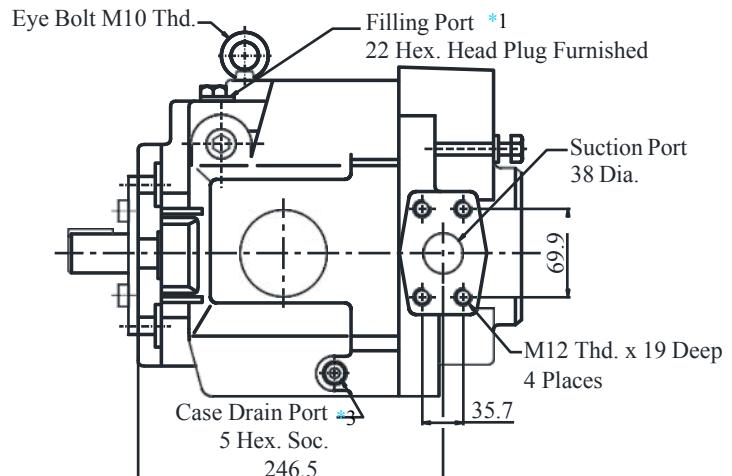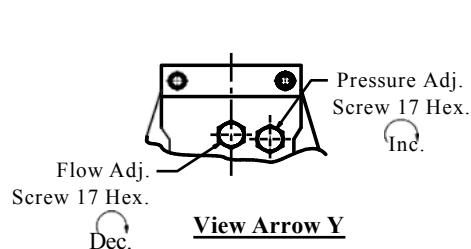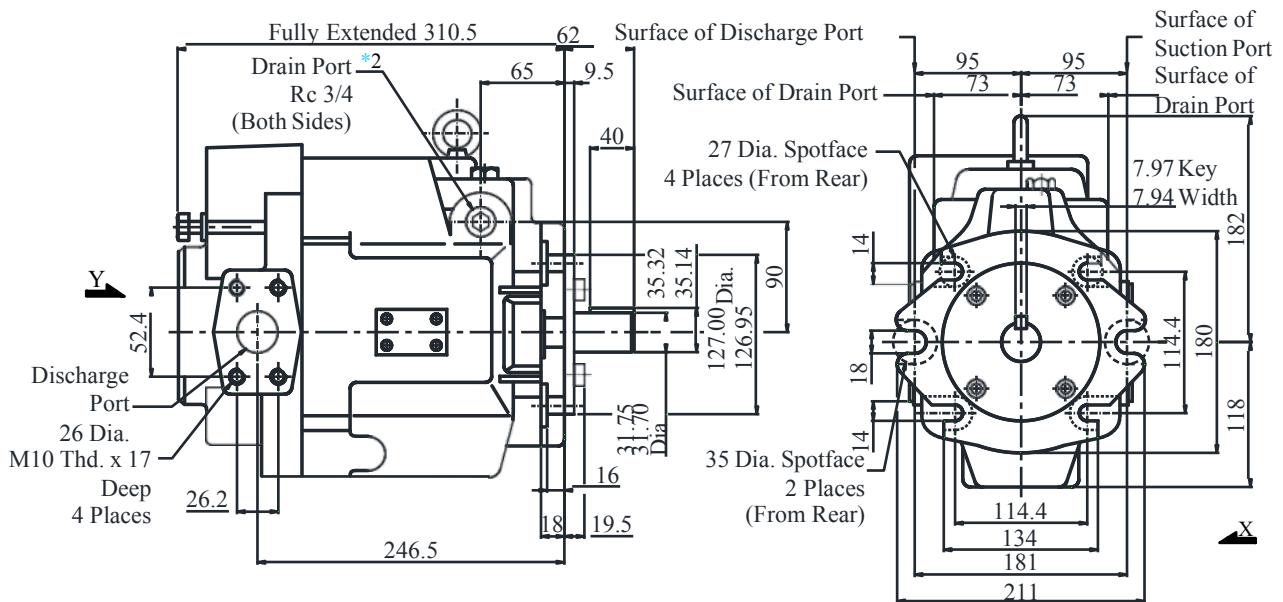

*¹ Install the pump so that the “Filling Port” is at the top.

*² Use either port of two drain ports at your options. Keep the remaining ports plugged.

*³ Case drain port is available for use when draining hydraulic fluid from pump casing.


- Foot Mounting type

Note : For Foot Mounting Type refer page no. 52.



**A90-FR01※-S-60
A100-FR01※-S-10**

- Flange Mounting

Side Port Type

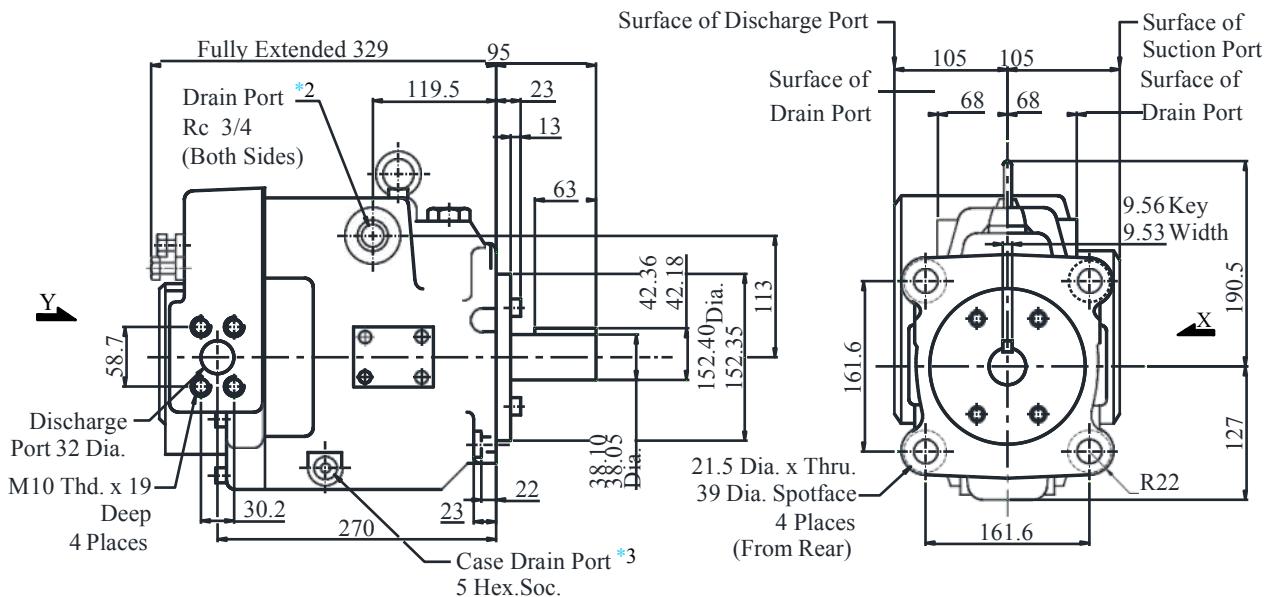

DIMENSIONS IN MILLIMETRES

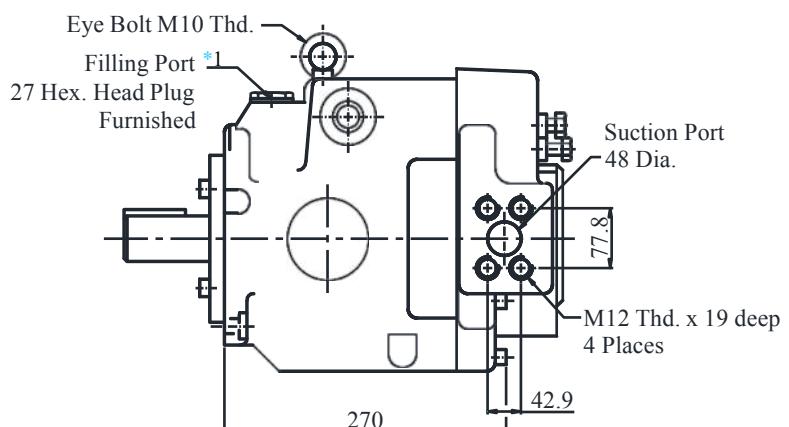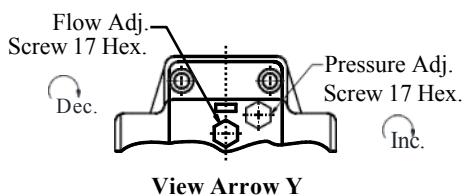

View Arrow X

*¹ Install the pump so that the "Filling Port" is at the top.

*² Use either port of two drain ports at your options. Keep the remaining ports plugged.

*³ Case drain port is available for use when draining hydraulic fluid from pump casing.

● Foot Mounting type

Note : For Foot Mounting Type refer page no. 53.



A145-FR01※-S-60

Side Port Type

DIMENSIONS IN
MILLIMETRES

A

- Flange Mounting

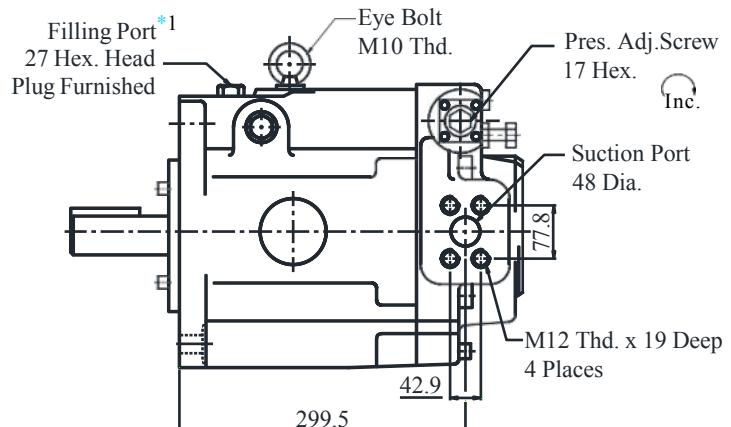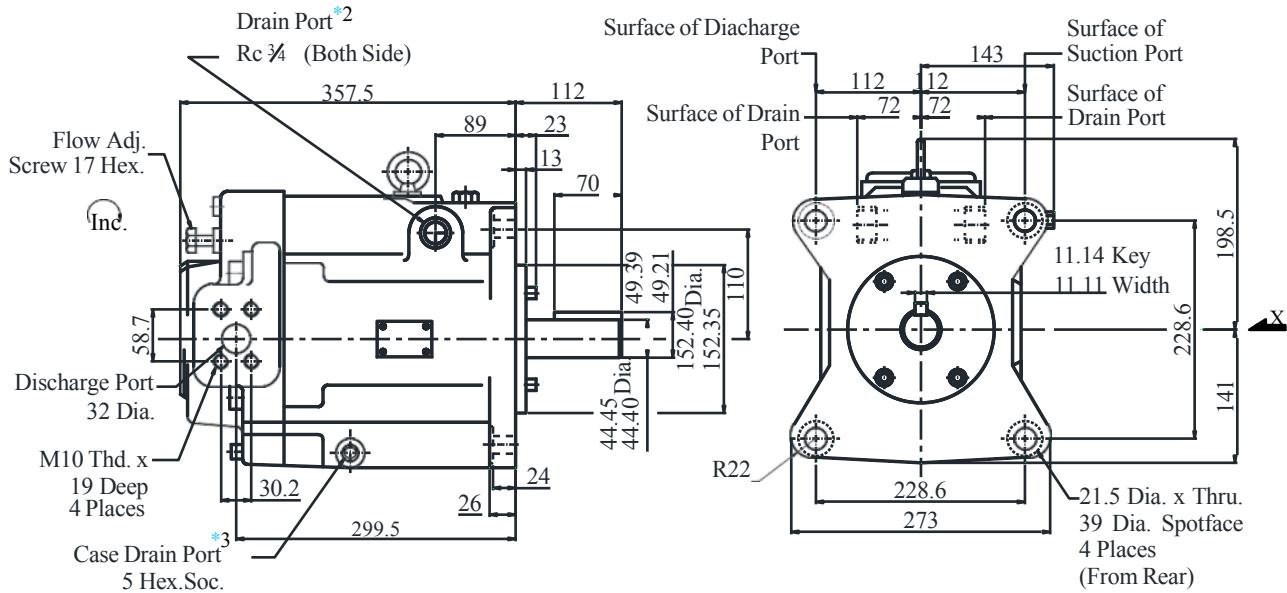

View Arrow X

*¹ Install the pump so that the "Filling Port" is at the top.

*² Use either port of two drain ports at your option. Keep the remaining ports plugged. Note that the drain port is machined only on the left side, as viewed from the shaft end.

*³ Case drain port are available for use when draining hydraulic fluid from pump casing.

- Foot Mounting type

Note : For Foot Mounting Type refer page no. 55.

Spare Parts List

A10- FR01※-12

- List of Seals

Sl. No.	Name of Parts	Part Numbers	Qty.	
			Pres. Adj. Range	
			B	C & H
1	Oil Seal	TCN24408Y	1	1
2	O-Ring	SO-NA-G50	1	1
3	O-Ring	SO-NB-P14	1	1
4	O-Ring	SO-NB-G120	1	1
5	O-Ring	SO-NB-P6	2	2
6	O-Ring	SO-NB-P12	6	5
7	O-Ring	SO-NA-A018	1	1
8	O-Ring	SO-NB-P10	1	1
9	O-Ring	SO-NB-P9	---	1

- List of Seals Kits

Pump Model Numbers	Seal Kit Numbers
A10-FR01B-12	KS-A10-01B-12
A10-FR01C-12	KS-A10-01H-12
A10-FR01H-12	

Note: When ordering seals, please specify the seal kit number from the table above.

A16/22/37/56-※-R-01-※-※-K-32

Sl. No.	List of Seals Name of Parts	Part Numbers				Qty.
		A16-※-R-01	A22-※-R-01	A37-※-R-01	A56-※-R-01	
1	Oil Seal	TCN254511		TCN 355511		1
2	Gasket	1303-PK2 11969-1		1316-PK2 11970-9	1307-PK2 11971-7	1
3	O-Ring	SO-NA-G25		SO-NA-G30	SO-NA-P36	2
4	O-Ring	SO-NB-P12		SO-NB-P10A		1
5	O-Ring		SO-NB-P9			1
6	O-Ring		SO-NA-A017			1
7	Seal Washer		W8			1
8	O-Ring		SO-NB-P14			1
9	O-Ring	SO-NA-G55		SO-NA-G75		1

- List of Seals Kits

Pump Model Numbers	Seal Kit Numbers
A16-※-R-01-※-※-K-32	KS-A16-01-32
A22-※-R-01-※-※-K-32	
A37-※-R-01-※-※-K-32	KS-A37-01-32
A56-※-R-01-※-※-K-32	KS-A56-01-32

Note: When ordering seals, please specify the seal kit number from the table above.

A70/90/100-※R01※-S-

※

Sl. No.	Name of Parts	Parts Numbers		Qty.
		A70-※-R01-※-S	A90-※-R01-※-S A100-※-R01-※-S	
1	Gasket	1314E-PK2 11972-5	1310E-PK2 11973-3	1
2	Back up Ring		1310E-PK4 12440-0	1
3	Oil Seal	TCN 355511	TCN 456812	1
4	O-Ring	SO-FA-G85	SO-FA-G95	1
5	O-Ring		SO-NA-P18	1
6	O-Ring		SO-NB-P9	3
7	O-Ring	SO-NB-P14	SO-NB-P18	1
8	Seal Washer	W10	-	1
9	O-Ring		SO-NB-P5	1

- List of Seals Kits

Pump Model Numbers	Seal Kit Numbers
A70-※R01※S-60	KS-A70-01-60
A90-※R01※S-60	KS-A90-01-60
A100-※R01※S-10	KS-A100-01-10

Note: When ordering the seals, please specify the seal kit number from the table above.

A145-※R01※S-60

Sl. No.	Name of Parts	Parts Number	Qty.
1	O-Ring	S-31.5(NBR, Hs70)	1
2	O-Ring	SO-FA-G105	1
3	O-Ring	SO-NA-P18	1
4	O-Ring	SO-NB-P9	2
5	O-Ring	SO-NB-A017	1
6	O-Ring	SO-NB-A016	1
7	O-Ring	SO-NB-P18	1
8	O-Ring	SO-NB-P5	1
9	Back Up Ring	1310E-PK4 12440-0	1
10	Back Up Ring	For SO-NB-A017	1
11	Back Up Ring	For SO-NB-A016	1
12	Oil Seal	TCN 507212	1
13	Gasket	1312-PK2 11974-1	1


Note: When ordering seals, please specify the seal kit number KS-A145-01-60.

A


“A” Series Variable Displacement Piston Pumps

“A” Series Variable Displacement Piston Pumps-Single Pump, Proportional Electro-Hydraulic Load Sensing Type


■ Performance Characteristic

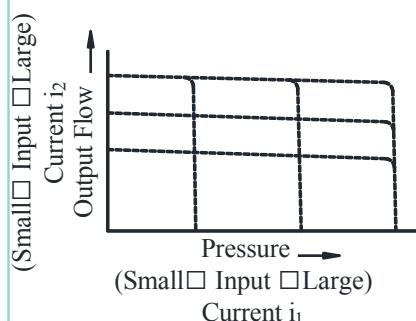

Graphic Symbol

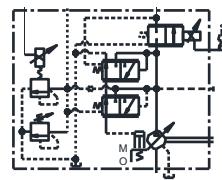

A16/A22/A37/A45/A56

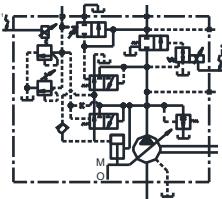

A70/A90/A100/A145

■ Model Number Designation

A56	-F	-R	-04	-C	-K	-32
Series Number	Mounting	Direction of Rotation	Control Type	Pressure Adj. Range Kgf/cm ²	Shaft Extension	Design Number
A16 (15.8 cm ³ /rev.)	F: Flange Mtg.	(Viewed from Shaft End) R: Clockwise ^{*1}	04: Proportional Electro-Hydraulic Load Sensing Type	B: 15-70 C: 15-160 H: 15-210	K: Keyed Shaft	32
A22 (22.2 cm ³ /rev.)				B: 15-70 C: 15-160		32
A37 (36.9 cm ³ /rev.)				B: 20-70 C: 20-160 H: 20-210		
A45 (45.0 cm ³ /rev.)				H: 12-172		10393
A56 (56.2 cm ³ /rev.)				B: 20-70 C: 20-160 H: 20-210		32
A70	-F	R	04	C	S	-60
Series Number	Mounting	Direction of Rotation	Control Type	Pressure Adj. Range Kgf/cm ²	Port Position	Design Number
A70 (70.0 cm ³ /rev.)	F: Flange Mtg.	(Viewed from Shaft End) R: Clockwise ^{*1}	04: Proportional Electro-Hydraulic Load Sensing Type	C: 15-160 H: 15-210	S: Side Port	60
A90 (91.0 cm ³ /rev.)						60
A100 (100 cm ³ /rev.)						10
A145 (145 cm ³ /rev.)						60

^{*1} Pumps with Counterclockwise direction are available. Consult CNIP for details.

“A” Series Variable Displacement Piston Pumps
Single Pump, Proportional Electro-Hydraulic Load Sensing Type

Pipe Flange Kits

Pipe Flange kits are available.

When ordering, specify the kit number from the table below.

Pump Model Numbers	Name of Port	Pipe Flange Kit Numbers.	
		Threaded Connection	Socket Welding ^{*1}
A16-※-R-04	Suction	F5-06-A-10	F5-06-B-10
	Discharge	— ^{*2}	— ^{*2}
A37-※-R-04	Suction	F5-10-A-10	F5-10-B-10
	Discharge	F5-06-A-10	F5-06-B-10
A45-※-R-04	Suction	F5-12-A-10	F5-12-B-10
	Discharge	F5-10-A-10	F5-10-B-10
A56-※-R-04	Suction	F5-16-A-10	F5-16-B-10
	Discharge	F5-10-A-10	F5-10-B-10
A70-※ R04	Suction	F5-12-A-10	F5-12-B-10
	Discharge	F5-10-A-10	F5-10-B-10
A90-※ R04	Suction	F5-16-A-10	F5-16-B-10
	Discharge	F5-10-A-10	F5-10-B-10
A100-※ R04			
A145-※ R04			

^{*1} In case of using socket welding flanges, there is a case where the operating pressure should be set lower than the normal because of strength of the flanges. Therefore, please pay cautious attention to the operating pressure when the socket welding flanges are used.

^{*2} Discharge port for pump model “A16” and “A22” is available only the threaded connections.

Details of pipe flange kits are described in EIC-L-1001 page no. 722.

Instructions

Bleeding Air

In order to get steadily controlled pressure and flow, bleed air by loosening the air vent screw and fill solenoid armature with operating oil.

Manual Adjustment Screws

Manual adjustment screws may be used for initial running adjustment or in case of electrical failures in order to adjust pressure and flow temporarily. In case of normal use, put the manual adjustment screws back in their preset position.

Position of Cable Departure


Position of cable departure can be changed. For details, refer to EDG-01 valve in EIC-H-1001 page no. 561.

Connection of Surge Cut-off Valve to “A” Series Pump (For A16 to A56 Type)

If using surge cut-off valve (SF1105-A-10), connect between pilot port “PP” of this pump and port “PP” of surge cut-off valve as pilot piping (refer to drawing below).

Inside diameter of pipe should be more than 8 mm.

Consult CNIP for details of surge cut-off valve.

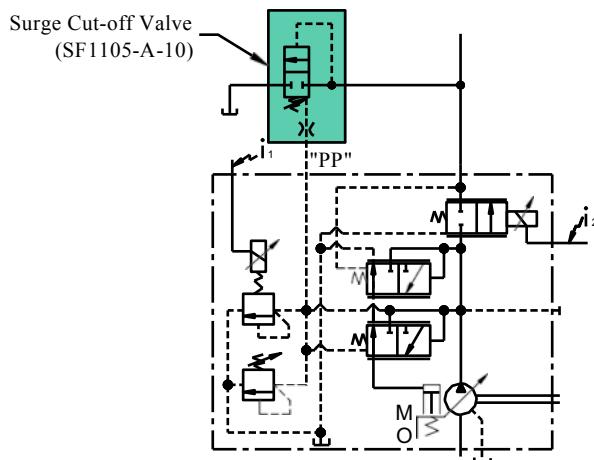

PISTON PUMPS

Specifications

Descriptions		Model Number		A16	A22	A37	A45	A56	A70	A90	A100	A145	
Geometric Displacement		cm ³ /rev.		15.8	22.2	36.9	45.0	56.2	70.0	91.0	100	145	
Operating Pres. (Kgf/cm ²)		Rated* ²		160	160	160	160	160	210	210	210	210	
		Intermittent* ¹		210	160	210	172	210	210	210	210	210	
Shaft Speed Range r/min.		Max.		1800	1800	1800	1800	1800	1800	1800	1800	1800	
		Min.		600	600	600	600	600	600	600	600	600	
Flow Control		Flow Adj. Range		L/min.	1-28.4	1-40	1-66	1-81	1-101	1-126	1-163	1-180	2-261
		Min. Pres. Required Kgf/cm ² for Flow Ad			15	15	15	20	20	10	10	10	10
		Differential Pres. Kgf/cm ²						3.7					2.2
		Step Response * ⁵ (t_1 :max. flow ms)			70	80	120	125	125	100	120	120	210
Pressure Control		Hysteresis								3% or less* ⁴			
		Rated Current		mA	900	700	740	780	790	820	920	920	920
		Coil Resistance [20°C]								10			
		Pres. Adj. Range Kgf/cm ²									Refer to model Number Designation		
Applicable Amplifier Model* ³		Step Response ms		t_1 * ⁵	80	80	50	55	55	150	150	150	160
		t_2 * ⁵			140	90	80	80	80	80	120	120	180
		Hysteresis								2% or less* ⁴			
		Rated Current		mA						(Pres. Adj. Range) B: 770, C:880, H:790	C:860 H:765	C:873 H:765	C:873 H:765
Approx. Mass Kg.		Coil Resistance [20°C]		Ω						10			

Model	Pres. Step Response		Loading Volume
	t_1	t_2	
A16, A22	15 → 160 Kgf/cm ²	160 → 15 Kgf/cm ²	High Pressure Hose 3/8" x 2 m
A37, A45, A56	20 → 160 Kgf/cm ²	160 → 20 Kgf/cm ²	High Pressure Hose 3/4" x 2 m
A70, A90, A100, A145	30 → 160 Kgf/cm ²	160 → 30 Kgf/cm ²	High Pressure Hose 1-1/4" x 2 m

*¹ Whenever setting pressure, make sure the full cut-off pressure never exceeds the maximum intermittent pressure.

*² When operating the pump exceeding the rated pressure, operating conditions are restricted. Refer to page no. 24.

*³ For detail specifications of power amplifiers, refer to EIC-H-1008 page no. 695.

*⁴ The figure mentioned in the above table are those obtained using CNIP's amplifier.

*⁵ Step response depends on circuit and operating conditions. Data shown in the table above is an example based on the condition right.


“A” Series Variable Displacement Piston Pumps

Single Pump, Proportional Electro-Hydraulic Load Sensing Type

Full Cut-off Pres. Vs. Input Current

- A16/A22/A37/A45/A56


Kgf/cm²

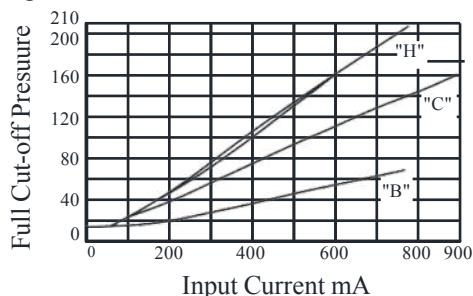

Note : Pressure adjustment range “H” is not available for A22.


- A70/A90/A100/A145

Kgf/cm²

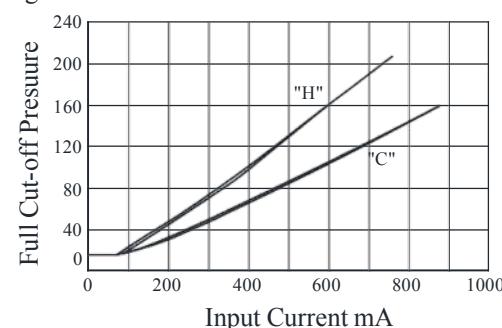


Output Flow vs. Input Current


- A16

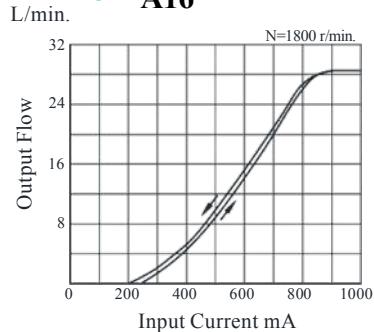


- A22

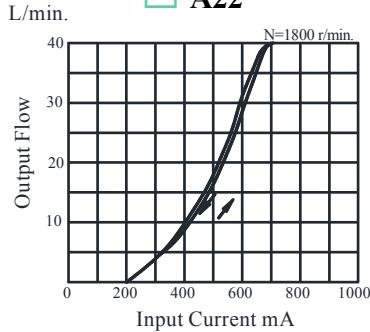


- A37

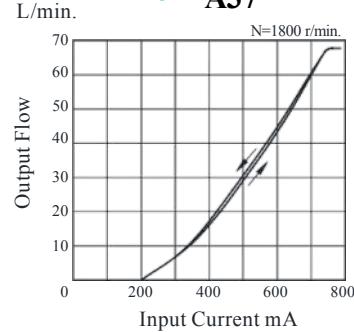


- A45

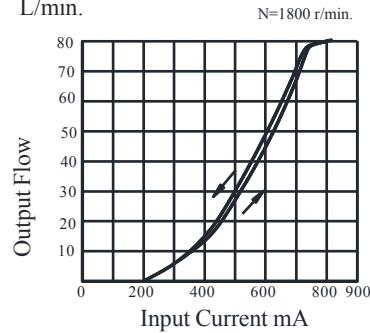


- A56

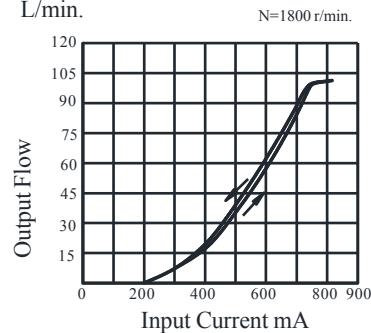


- A70

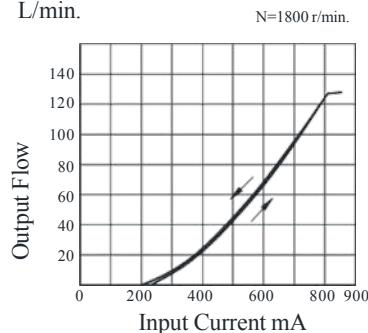


- A90

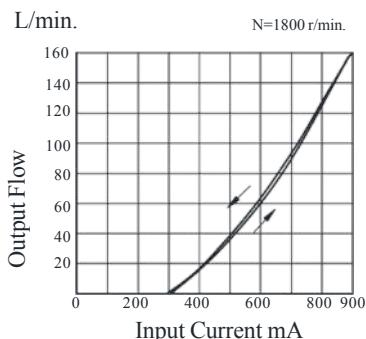

- A100

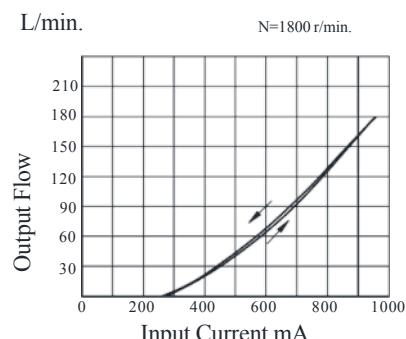




- A145

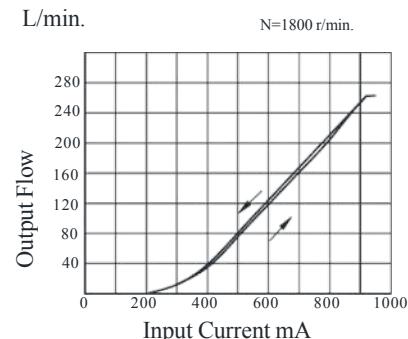


PISTON PUMPS

A16-F-R-04-※-K-32
A22-F-R-04-※-K-32

- Flange Mounting

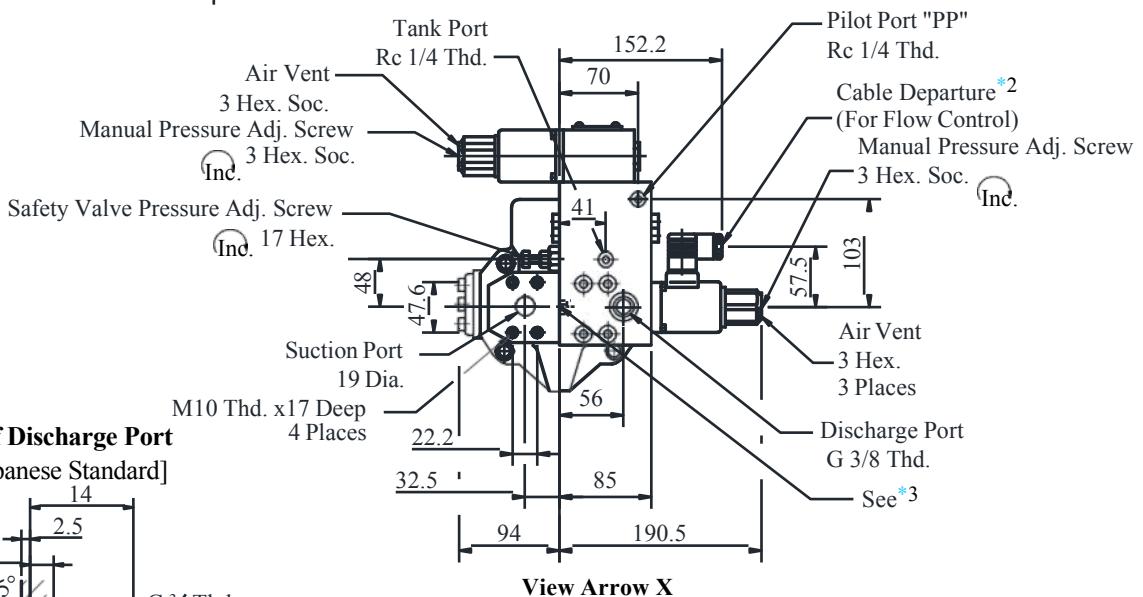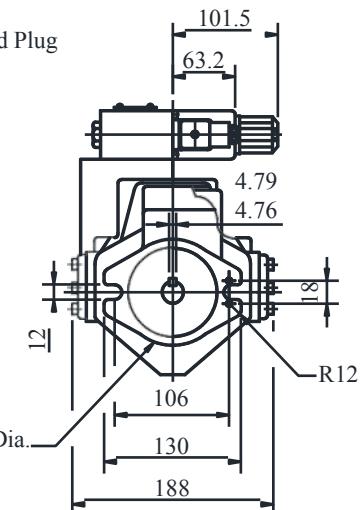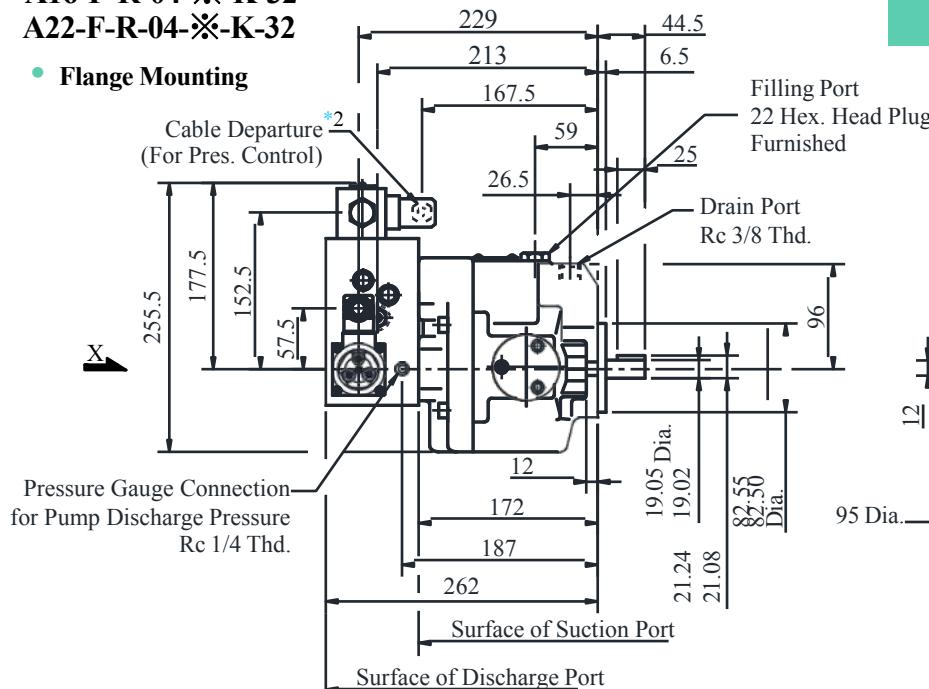


*¹ Detail of Discharge Port
[For Japanese Standard]

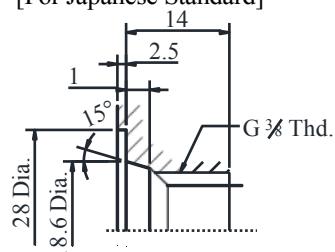

*² Cable Applicable:
Outside Dia. 8-10 mm.
Conductor Area Not Exceeding 1.5 mm².

*³ Do not touch the screw because it is adjusted at the time of shipment.

- Foot Mounting type



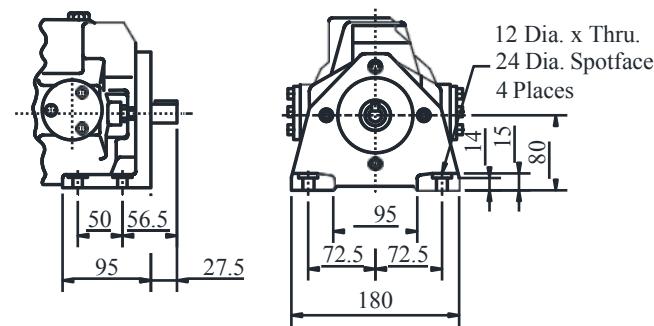


Note: For other dimensions, refer to "Flange Mtg."

"A" Series Variable Displacement Piston Pumps
Single Pump, Proportional Electro-Hydraulic Load Sensing Type

A37-F-R-04-※-K-32

- Flange Mounting

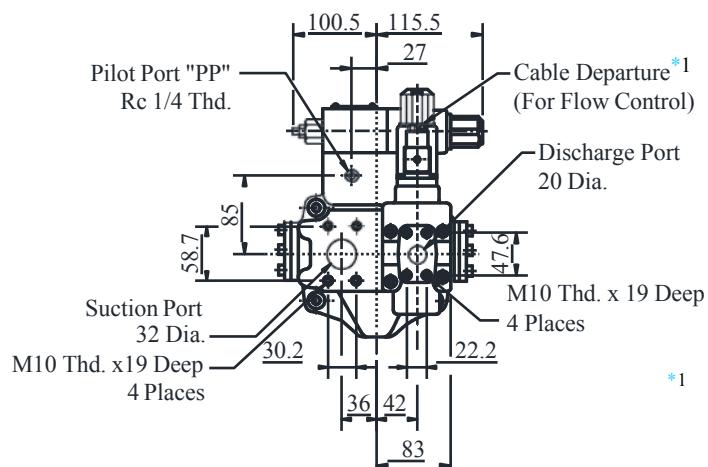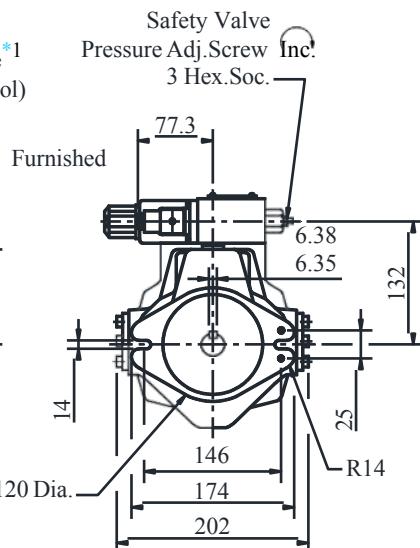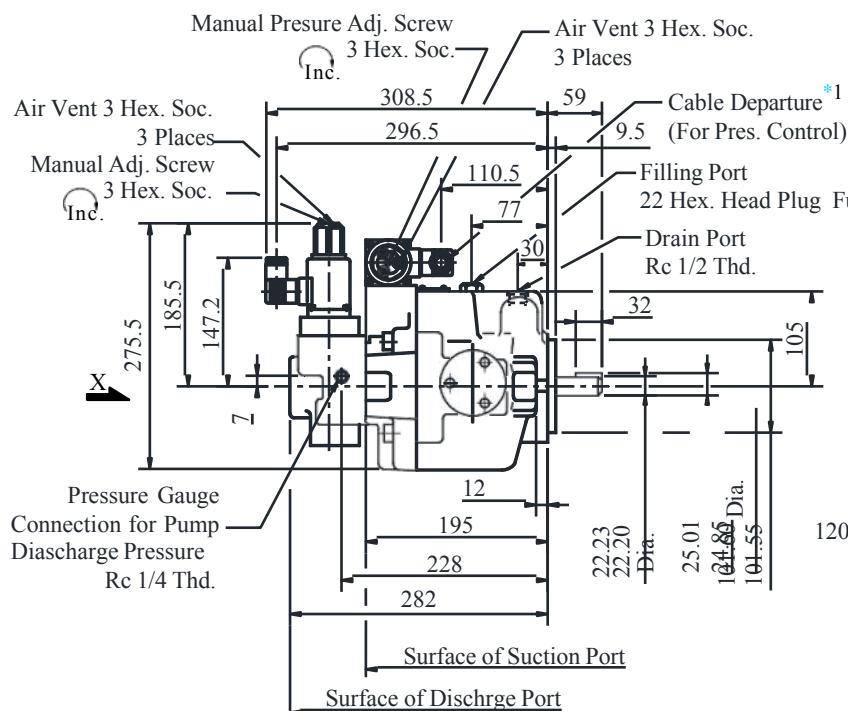


*1 Cable Applicable:
Outside Dia. 8-10 mm.
Conductor Area Not Exceeding 1.5 mm².

View Arrow X

DIMENSIONS IN
MILLIMETRES

- Foot Mounting type

Mounting Bracket is common to that of pressure compensator model.

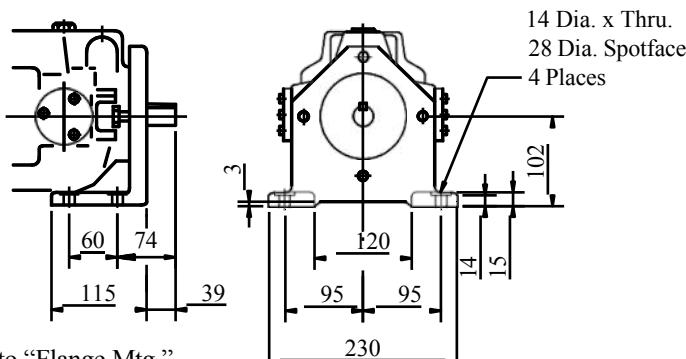

Note: For other dimensions, refer to "Flange Mtg."


"A" Series Variable Displacement Piston Pumps
Single Pump, Proportional Electro-Hydraulic Load Sensing Type

A

**"A" Series Variable
Displacement Piston Pumps**

A45-F-R-04-H-K-10393

- Flange Mounting

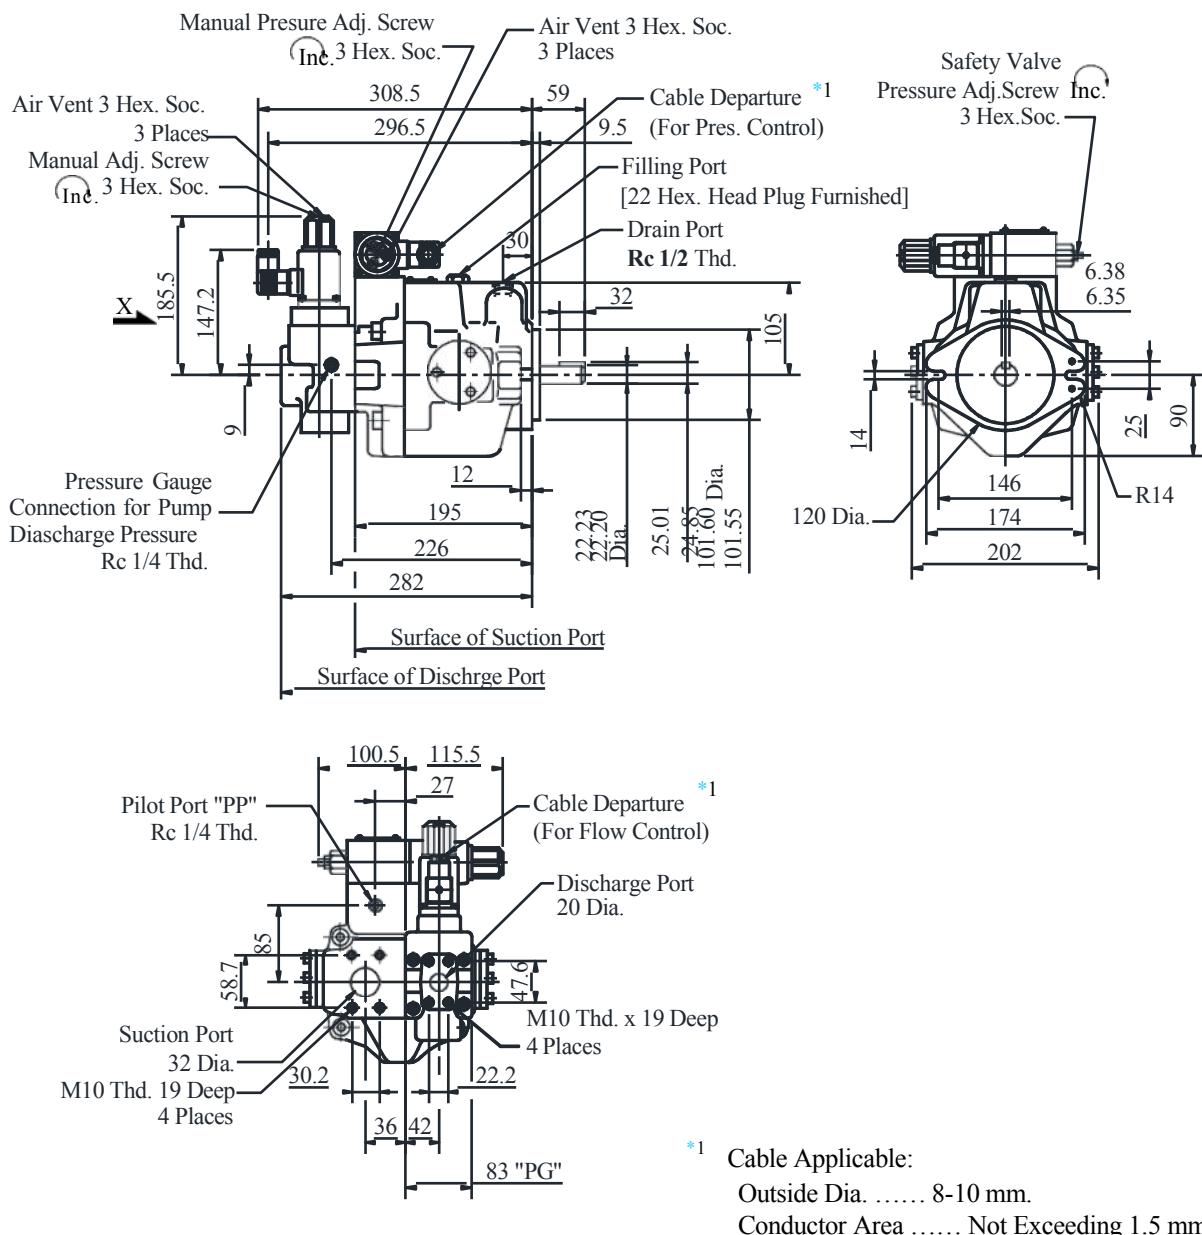


View Arrow X

DIMENSIONS IN
MILLIMETRES



- Foot Mounting type

Mounting Bracket is common to that of pressure compensator model.

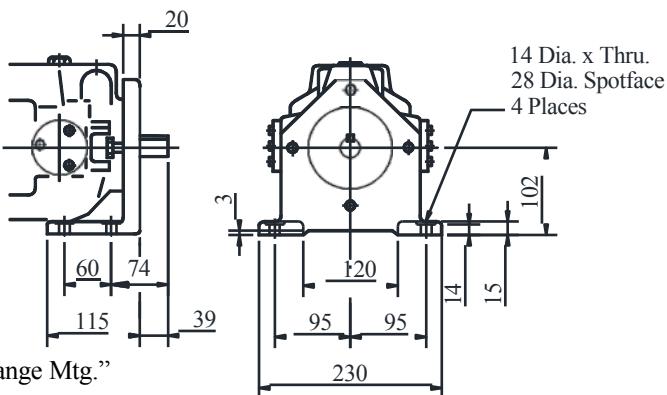

Note: For other dimensions, refer to "Flange Mtg."

"A" Series Variable Displacement Piston Pumps
Single Pump, Proportional Electro-Hydraulic Load Sensing Type

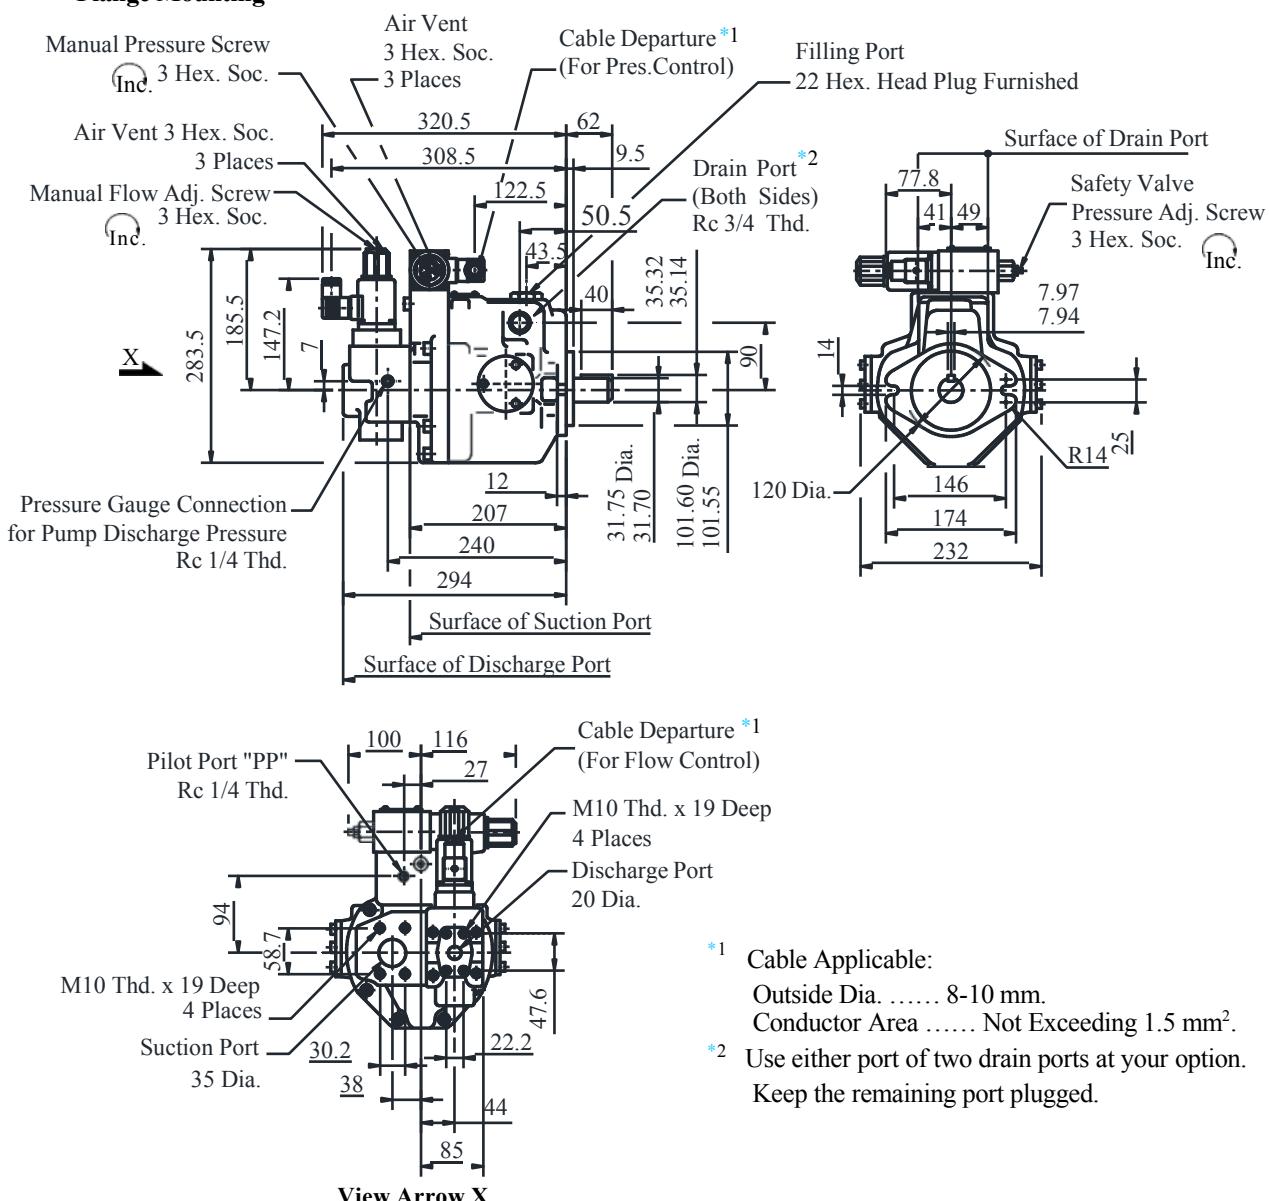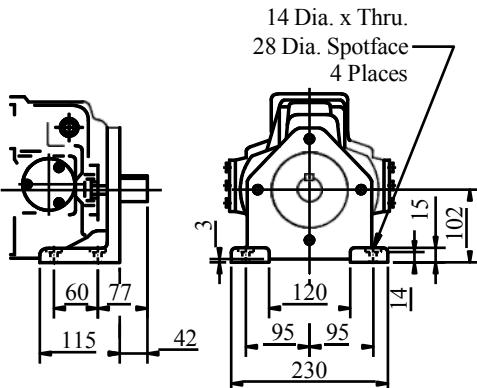
A56-F-R-04-※-K-32**• Flange Mounting**DIMENSIONS IN
MILLIMETRES**A56-L-R-04-※-K-32****• Foot Mounting type**

Note: For other dimensions, refer to “Flange Mtg.”

“A” Series Variable Displacement Piston Pumps
Single Pump, Proportional Electro-Hydraulic Load Sensing Type

A70-FR04※S-60


- Flange Mounting

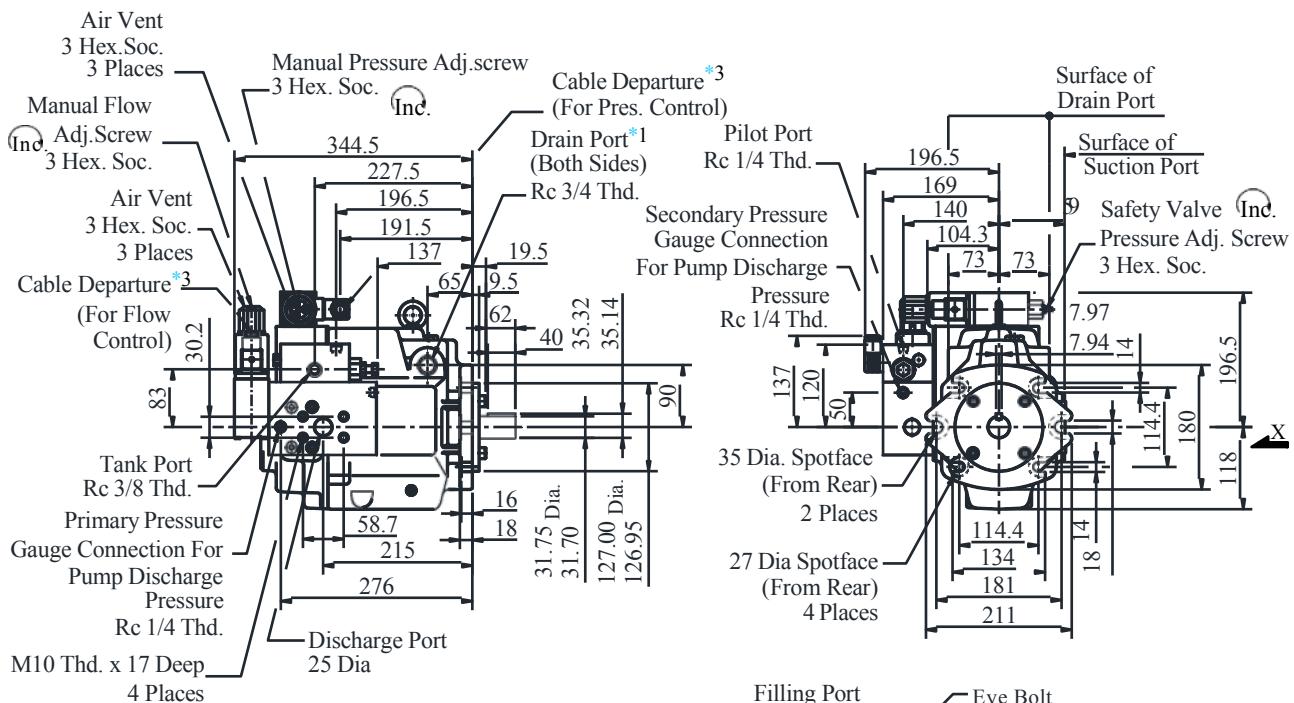

*¹ Use either port of two drain ports at your option.
Keep the remaining port plugged.

*² Case drain port is available for use when draining hydraulic fluid from pump casing.


*³ Cable Applicable:
Outside Dia. 8-10 mm.
Conductor Area Not Exceeding 1.5 mm².

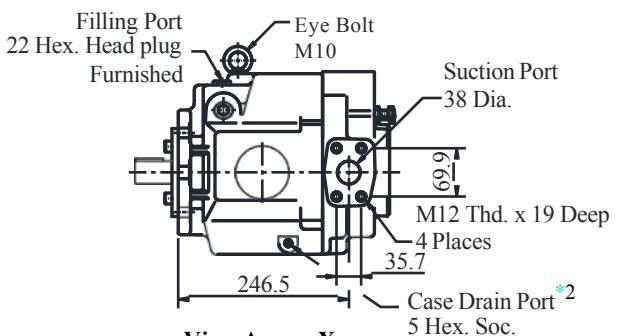

DIMENSIONS IN
MILLIMETRES

A70-LR04※S-60

- Foot Mounting type

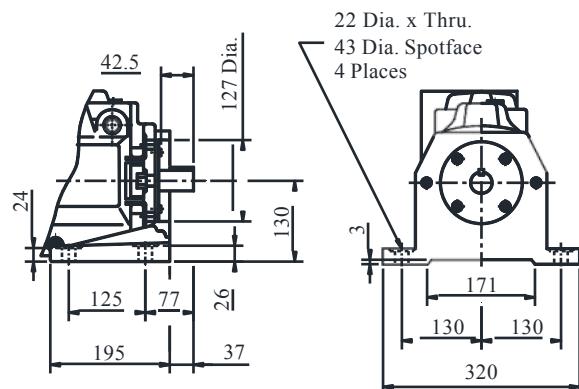


Note: For other dimensions, refer to "Flange Mtg."

"A" Series Variable Displacement Piston Pumps
Single Pump, Proportional Electro-Hydraulic Load Sensing Type

A90-FR04XS-60


- Flange Mounting

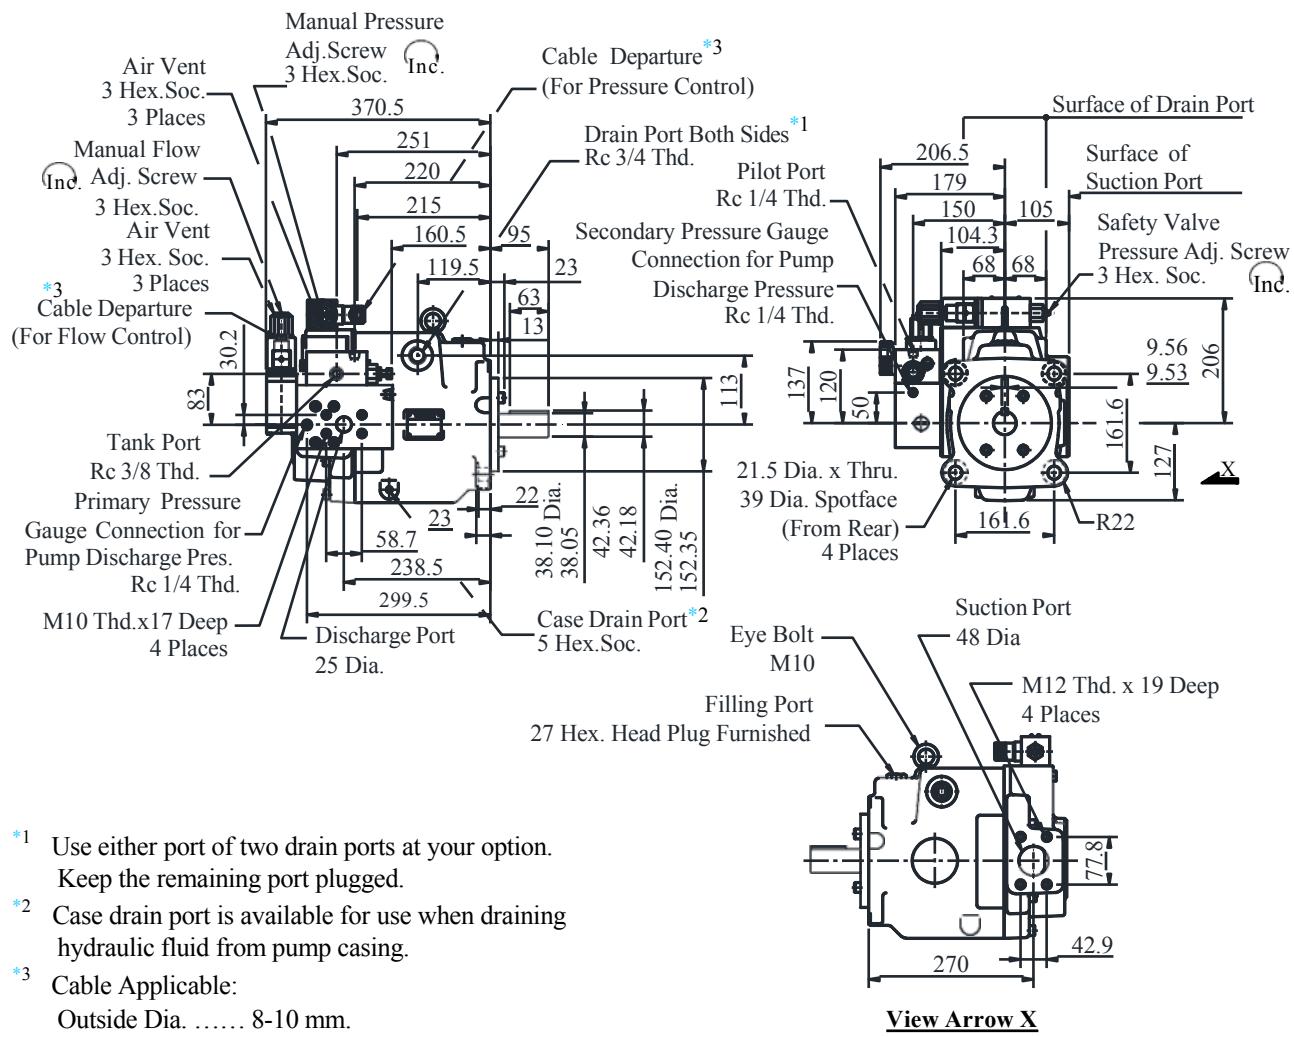

DIMENSIONS IN
MILLIMETRES

A90-LR04XS-60

- Foot Mounting

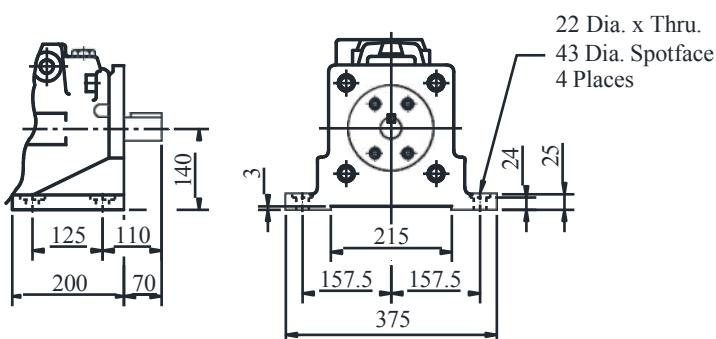


Note: For other dimensions, refer to “Flange Mtg.”

“A” Series Variable Displacement Piston Pumps
Single Pump, Proportional Electro-Hydraulic Load Sensing Type

A100-FR04※S-10

- Flange Mounting

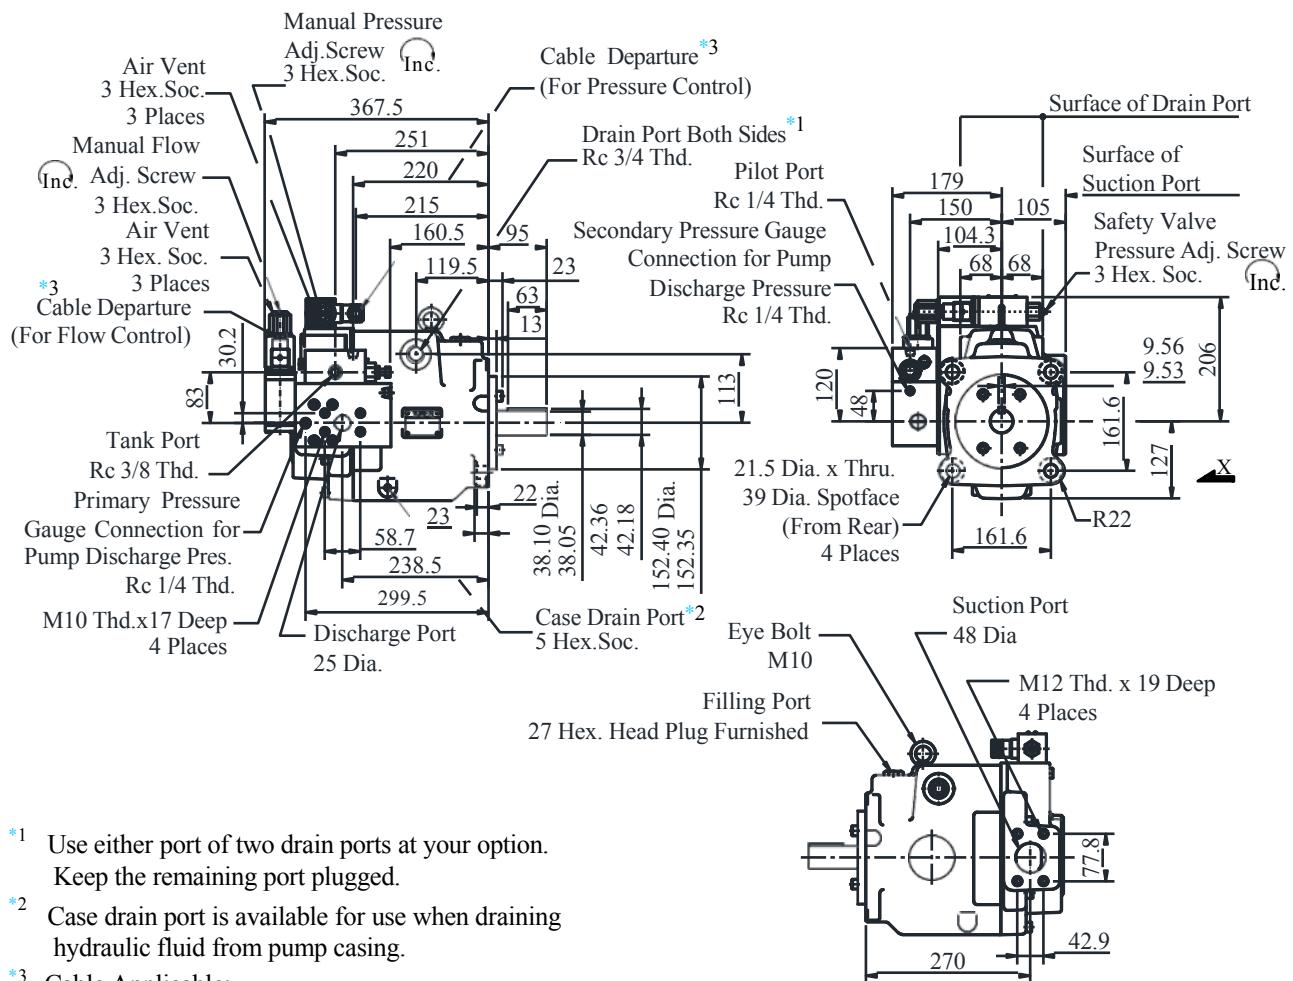

*¹ Use either port of two drain ports at your option.
Keep the remaining port plugged.


*² Case drain port is available for use when draining hydraulic fluid from pump casing.

*³ Cable Applicable:
Outside Dia. 8-10 mm.
Conductor Area Not Exceeding 1.5 mm².

DIMENSIONS IN MILLIMETRES

A100-LR04※S-10

- Foot Mounting

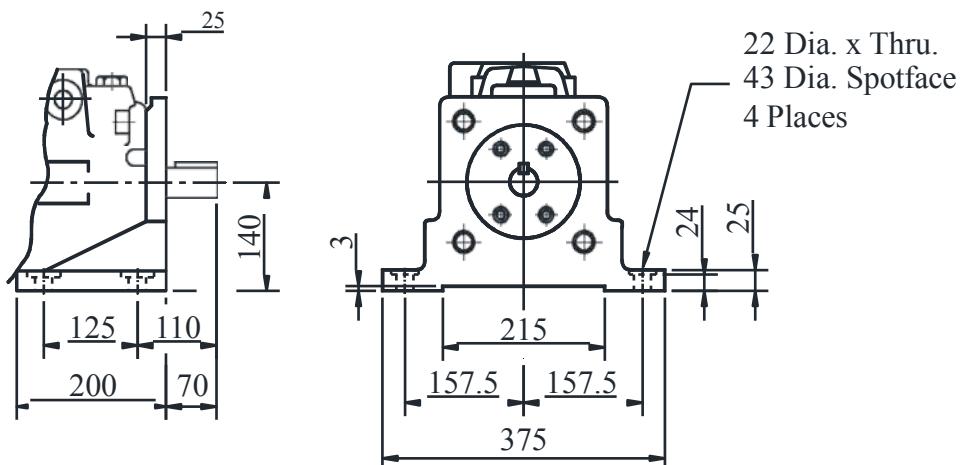


Note: For other dimensions, refer to "Flange Mtg."

"A" Series Variable Displacement Piston Pumps
Single Pump, Proportional Electro-Hydraulic Load Sensing Type

A145-FR04XS-60

- Flange Mounting

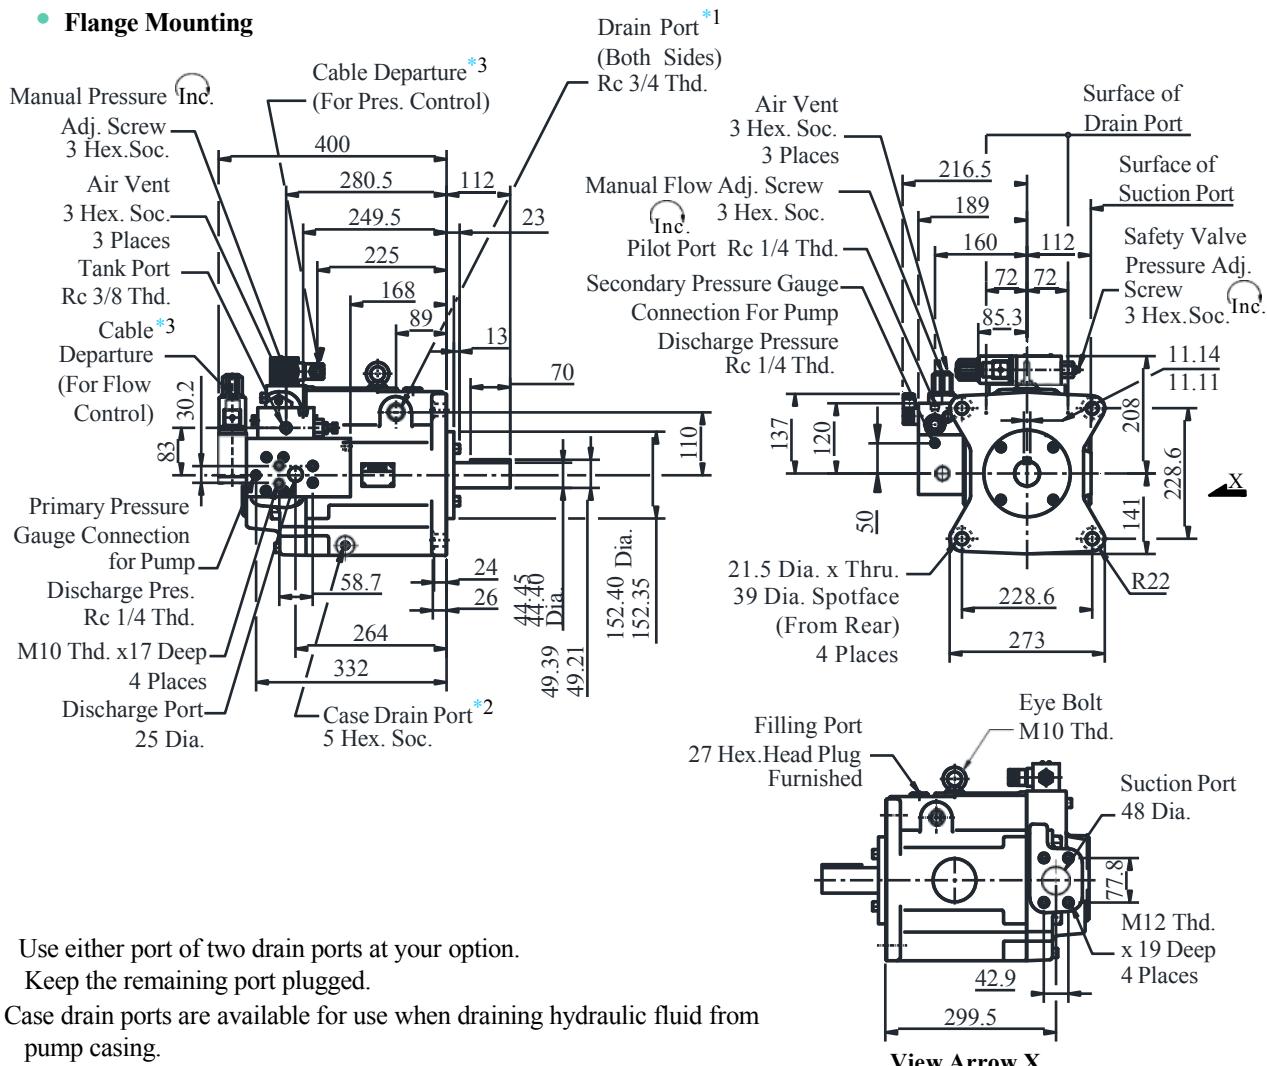

*¹ Use either port of two drain ports at your option.
Keep the remaining port plugged.


*² Case drain ports are available for use when draining hydraulic fluid from pump casing.

*³ Cable Applicable:
Outside Dia. 8-10 mm.
Conductor Area Not Exceeding 1.5 mm².

DIMENSIONS IN
MILLIMETRES

A145-LR04XS-60


- Foot Mounting type

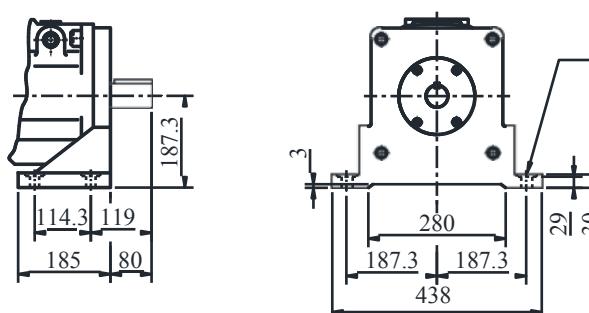


Note: For other dimensions, refer to “Flange Mtg.”

“A” Series Variable Displacement Piston Pumps
Single Pump, Proportional Electro-Hydraulic Load Sensing Type

“A” Series Variable Displacement Piston Pumps - Single Pump, Electro-Hydraulic Proportional Pressure & Flow Control Type

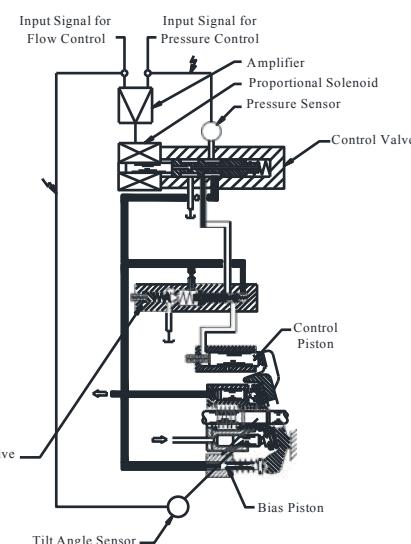


Performance Characteristic Curve

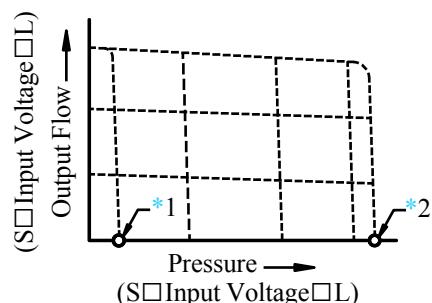


*¹ Unloading pressure when input signal is 0 V.

*² Safety valve setting pressure.

Graphic Symbols

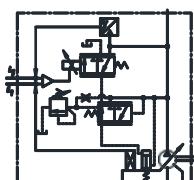

A16/A22/A37/A56

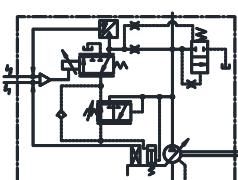

A70/A90/A145

Model Number Designation

A70	-F	R	04E	16	M	A	-60	-60
Series Number	Mounting	Direction of Rotation	Control Type	Control Press. at Input Signal is 5 V	Unit of Control Pressure	Type of Outboard Pump ^{*2}	Compensation Number ^{*3}	Design Number
A16 (15.8 cm ³ /rev.)							06	42
A22 (22.2 cm ³ /rev.)							11	42
A37 (36.9 cm ³ /rev.)	F: Flange Mtg.	(Viewed from Shaft End)	04E: Proportional Pressure & Flow Control Type	Use the same measure of the control pressure as shown on the right, 6.9 MPa Specify within the range of maximum operating pressure	M: MPa	None ^{*2}	01	42
A56 (56.2 cm ³ /rev.)					P: PSI		02	42
A70 (70.0 cm ³ /rev.)	L: Foot Mtg.	R: Clockwise ^{*1} (Normal)					60	60
A90 (91.0 cm ³ /rev.)							60	60
A100 (100.0 cm ³ /rev.)							60	10
A145 (145.0 cm ³ /rev.)							60	60

*¹ Pumps with ‘Counterclockwise’ direction are available. Consult CNIP for details.

*² These pumps, except A16 and A22 types, can be connected to outboard pumps.

- A37/A56 type (outboard pump connection symbol: **None**): spigot diameter:82.55mm (A16,A22, and PV2R1).
- A70/A90/A100/A145 type (outboard pump connection symbol: “**A**”): spigot diameter:82.55mm (A16,A22 and PV2R1).
- A70/A90/A100/A145 type (outboard pump connection symbol: “**B**”): spigot diameter:101.6mm (A37 and PV2R2).

*³ Amplifier Compensation Number may differ according to the main machine condition. Consult CNIP for details.

“A” Series Variable Displacement Piston Pumps Single Pump, Electro-Hydraulic Proportional Pressure & Flow Control Type

Specifications

Descriptions	Model Numbers	A16	A22	A37	A56	A70	A90	A100	A145			
Geometric Displacement ¹	cm ³ /rev.	15.8	22.2	36.9	56.2	70.0	91.0	100.0	145.0			
Operating Pres. (Kgf/cm ²)	Rated ^{*2}	160	160	160	160	250	250	210	250			
	Intermittent ^{*1}	210	160	210	210	280	280	210	280			
Shaft Speed Range r/min.					600 - 1800							
Flow Control	Max. Flow ^{*3} L/min.	28.4	40.0	66.4	101.0	126.0	163.0	180.0	261.0			
	Min. Pres. Required Kgf/cm ² for Flow Adj.				20 ^{*4}							
	Hysteresis				1% or less							
	Repeatability				1% or less							
Pressure Control	Input Signal				Max. Flow / 5 V DC							
	Min. Adj. Pressure Kgf/cm ²				7							
	Hysteresis				1% or less							
	Repeatability				1% or less							
Input Signal					Specified Control Pressure / 5 V DC							
Coil Resistance [@ 20°C]					10							
Input Impedance					Flow Control : 10 kΩ Pres. Control : 10 kΩ							
Supply Electric Power					24 V DC (21 – 28 V Included Ripple)							
Power Input (Max.) W					30							
Output Signal	Flow				5 V DC/Max. Flow							
	Pressure				5 V DC/Specified Control Pressure							
Alarm Signal Output (Open Collector)					Voltage: Max. 30 V DC Current: Max. 40mA							
Ambient Temperature °C					0 - 50 (With Circulated Air)							
Approx. Mass Kg.	Flange Mtg.	20.5	20.5	32.0	39.0	64.0	76.5	76.5	96.4			
	Foot Mtg.	22.7	22.7	36.3	43.3	76.0	97.0	97	121.4			

^{*1} Whenever setting pressure, make sure the full cut-off pressure never exceeds the maximum intermittent pressure.

^{*2} When operating pump exceeding the rated pressure, operating conditions are restricted.

Refer to page 24 on Catalogue No. EIC-A-1002 for the details.

^{*3} Maximum flow differs to shaft speed.

The value listed above indicates shaft speed of 1800 r/min.

For other shaft speed calculate by the ratio of shaft speed.

^{*4} To secure the required minimum pressure, special sequence valves are available, to be directly installed at the discharge port of the pump. Consult CNIP for details.

Pipe Flange Kits

For pipe flange, refer to form of pressure compensator type in page no.25 on Catalogue No. EIC-A-1002.

Instructions

- **Input Signal**

The pump is on unload condition when the pump is operated without input signal voltage.

- **Electric Source**

Always turn off electric source whenever the connector for swash plate tilt angle sensor is removed.

- **Compensation of pump Maximum Regulated Flow at Frequency**

If the same maximum flow is required at 50 Hz or 60 Hz, connect short plug in the amplifier to 60 Hz at the place where supplied frequency is 60 Hz. At this condition, maximum flow comes to the same value at 50 Hz.

If short plug is used at 60 Hz without making the change, maximum flow increased in proportion to frequency.

- **Painting on AMP. BOX and Solenoid**


To Maintain suitable radiation effect, the amp. box and the solenoid of the control valve should not be painted.

Outboard Pumps


A37 to A145 type pumps, except A16 and A22, can be used as double pumps, by connecting an outboard pump on the cover side. For details consult CNIP.

■ Output Flow vs. Input Signal


• A16

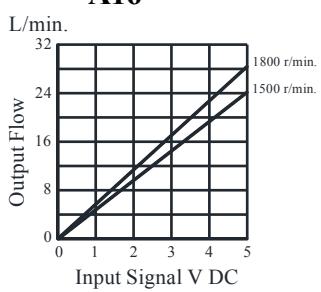


• A22

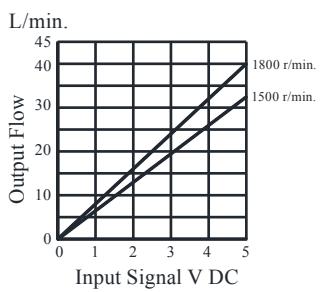


• A37

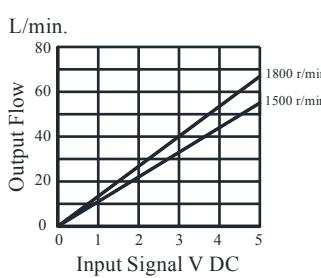


• A56

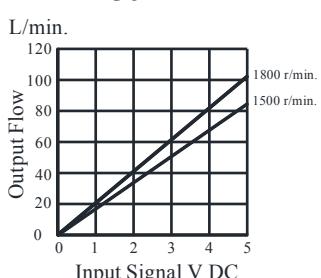


• A70

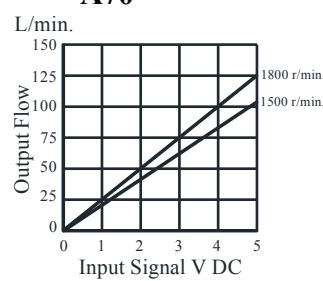


• A90

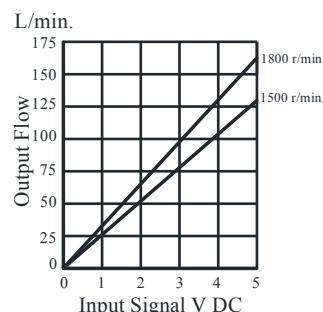

• A100

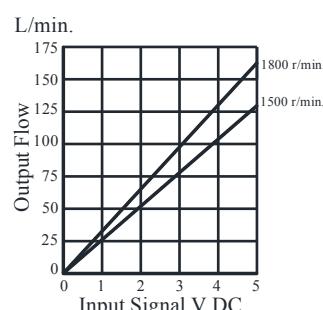


• A145

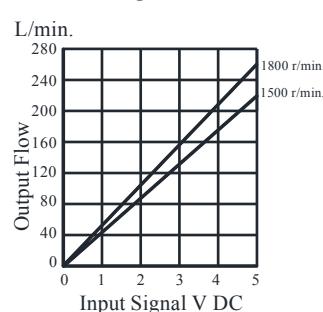

■ Full Cut-off Pre. Vs. Input Signal

Kgf/cm²

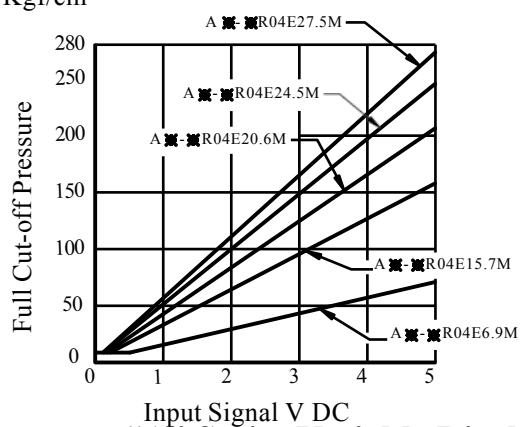

Note: Pump characteristics at 1800 r/min. is the same as those 1500 r/min. where frequency is compensated.
[Refer to page 47 of catalogue EIC-A-1002]

Refer to page 26 to 34 for performance characteristics of pressure compensator type excluding characteristics appeared on this catalogue.




**“A” Series Variable Displacement Piston Pumps Single Pump,
Electro-Hydraulic Proportional Pressure & Flow Control Type**

A

“A” Series Variable Displacement Piston Pumps

- A16-FR04E※-06-42
 - A22-FR04E※-11-42

- **Flange Mounting**

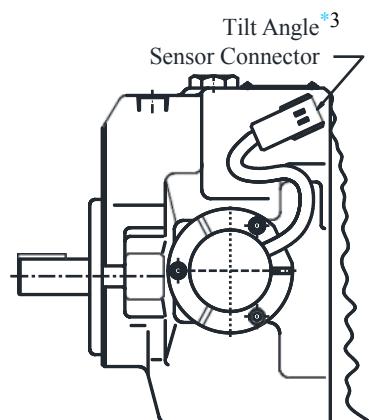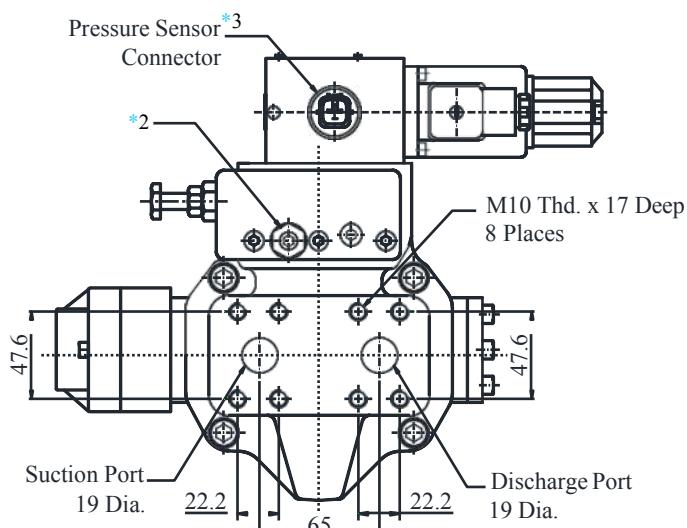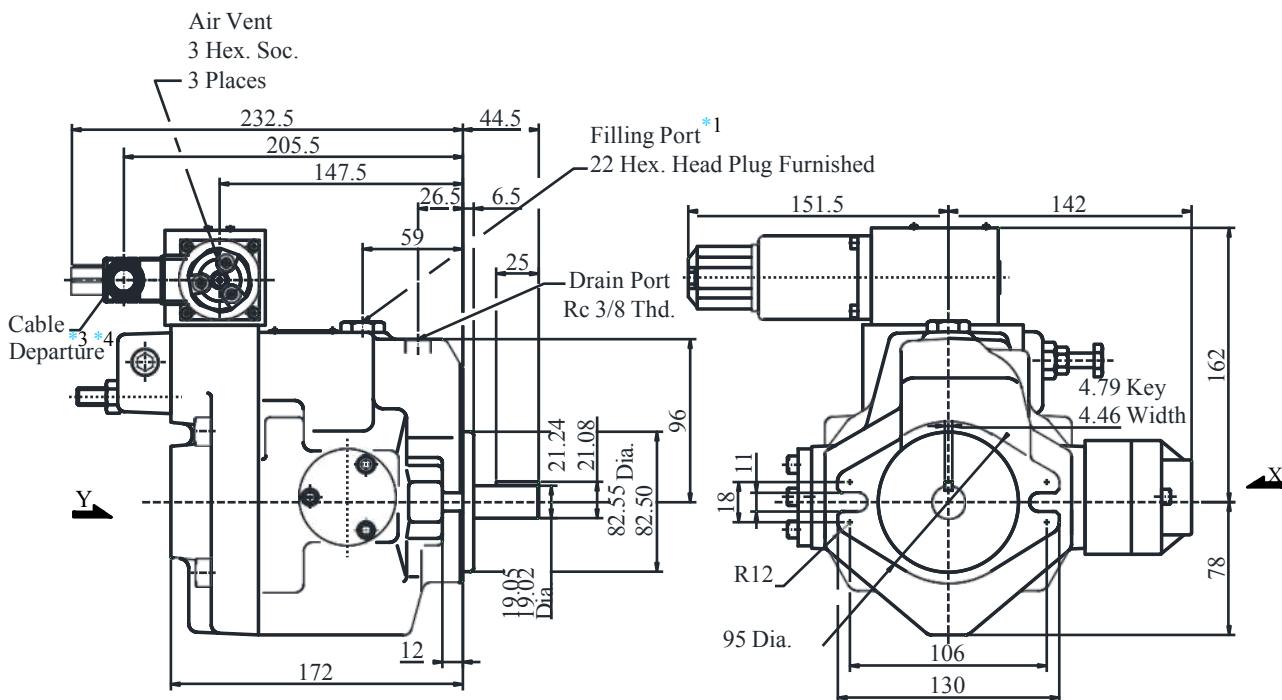

View Arrow Y

View Arrow X

^{*1} Install the pump so that the “Filling Port” is at the top.

*² Do not touch the screw because it is adjusted at the time of shipment.

^{*3} For cable connection with amplifiers, see page 65.

^{*4} Cable Applicable.

Outer Dia 8-10mm

Conductor area Not Exceeding 1.5mm²

DIMENSIONS IN MILLIMETRES



- Foot Mounting type

Note : For Foot Mounting Type refer page no. 48.

“A” Series Variable Displacement Piston Pumps Single Pump, Electro-Hydraulic Proportional Pressure & Flow Control Type

A37-FR04E※-01-42

- Flange Mounting

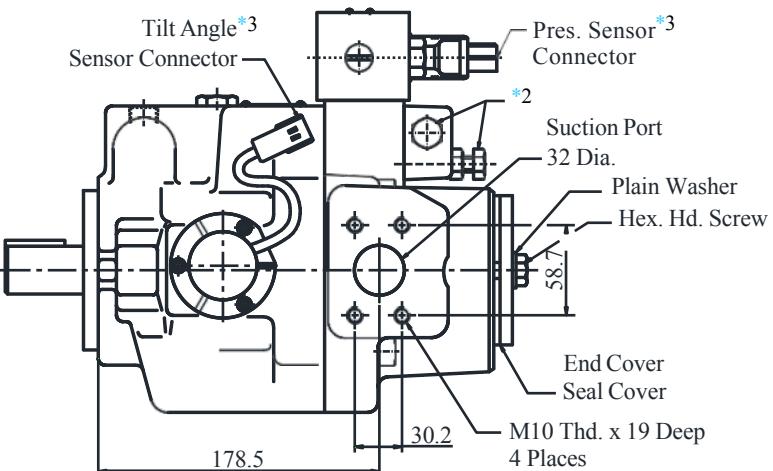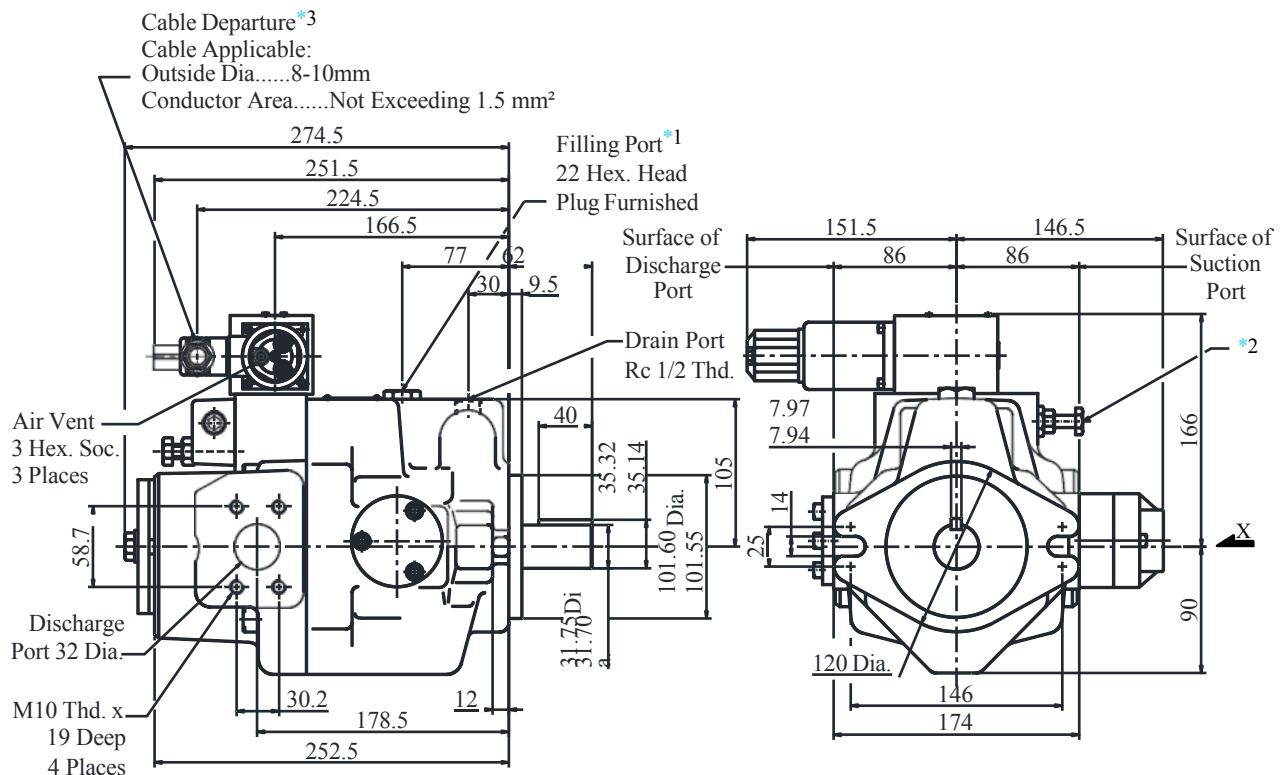

View Arrow X

^{*1} Install the pump so that the "Filling Port" is at the top.

^{*2} Do not touch the screw because it is adjusted at the time of shipment.

^{*3} For cable connection with amplifiers, see page 65.


- Foot Mounting type

Note : For Foot Mounting Type refer page no. 49.

DIMENSIONS IN
MILLIMETRES

A56-FR04E※-02-42

• Flange Mounting

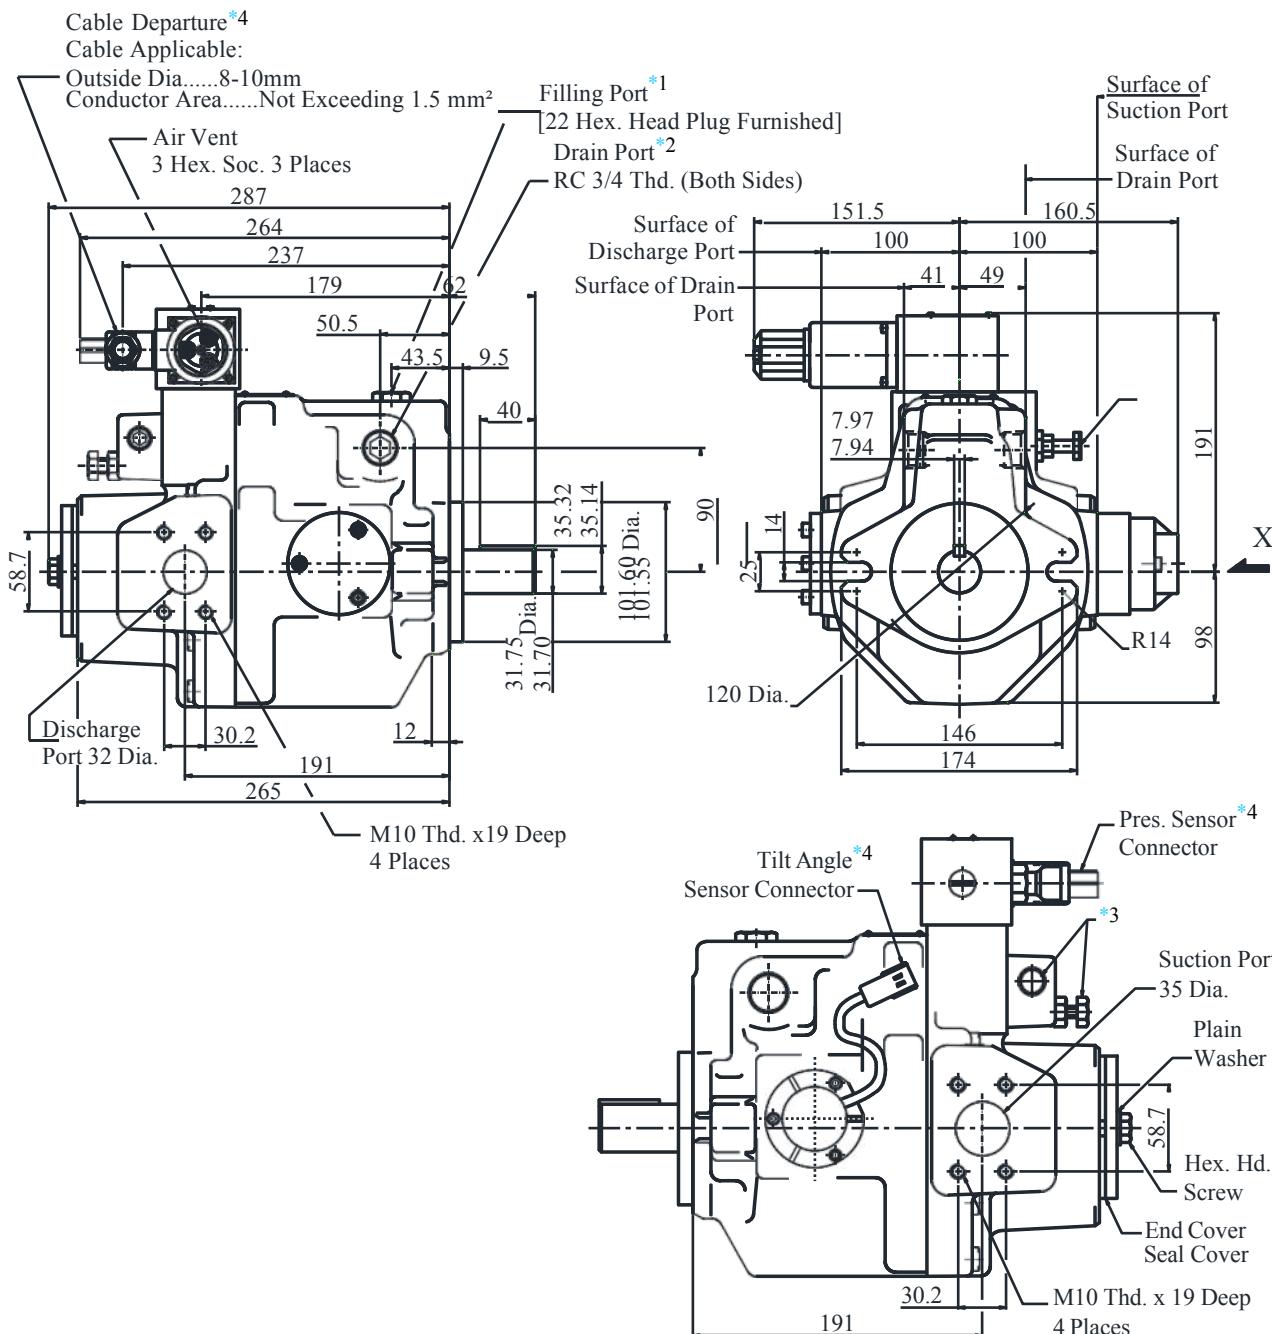

^{*1} Install the pump so that the “Filling Port” is at the top.

^{*2} Use either port of two drain ports at your option. Keep the remaining port plugged.

^{*3} Do not touch the screw because it is adjusted at the time of shipment.

^{*4} For cable connection with amplifiers, see page 65.

View Arrow X

DIMENSIONS IN
MILLIMETRES


• Foot Mounting type

Note : For Foot Mounting Type refer page no. 51.

**“A” Series Variable Displacement Piston Pumps Single Pump,
Proportional Electro-Hydraulic Pressure & Flow Control Type**

A70-FR04E***-60-60

- Flange Mounting

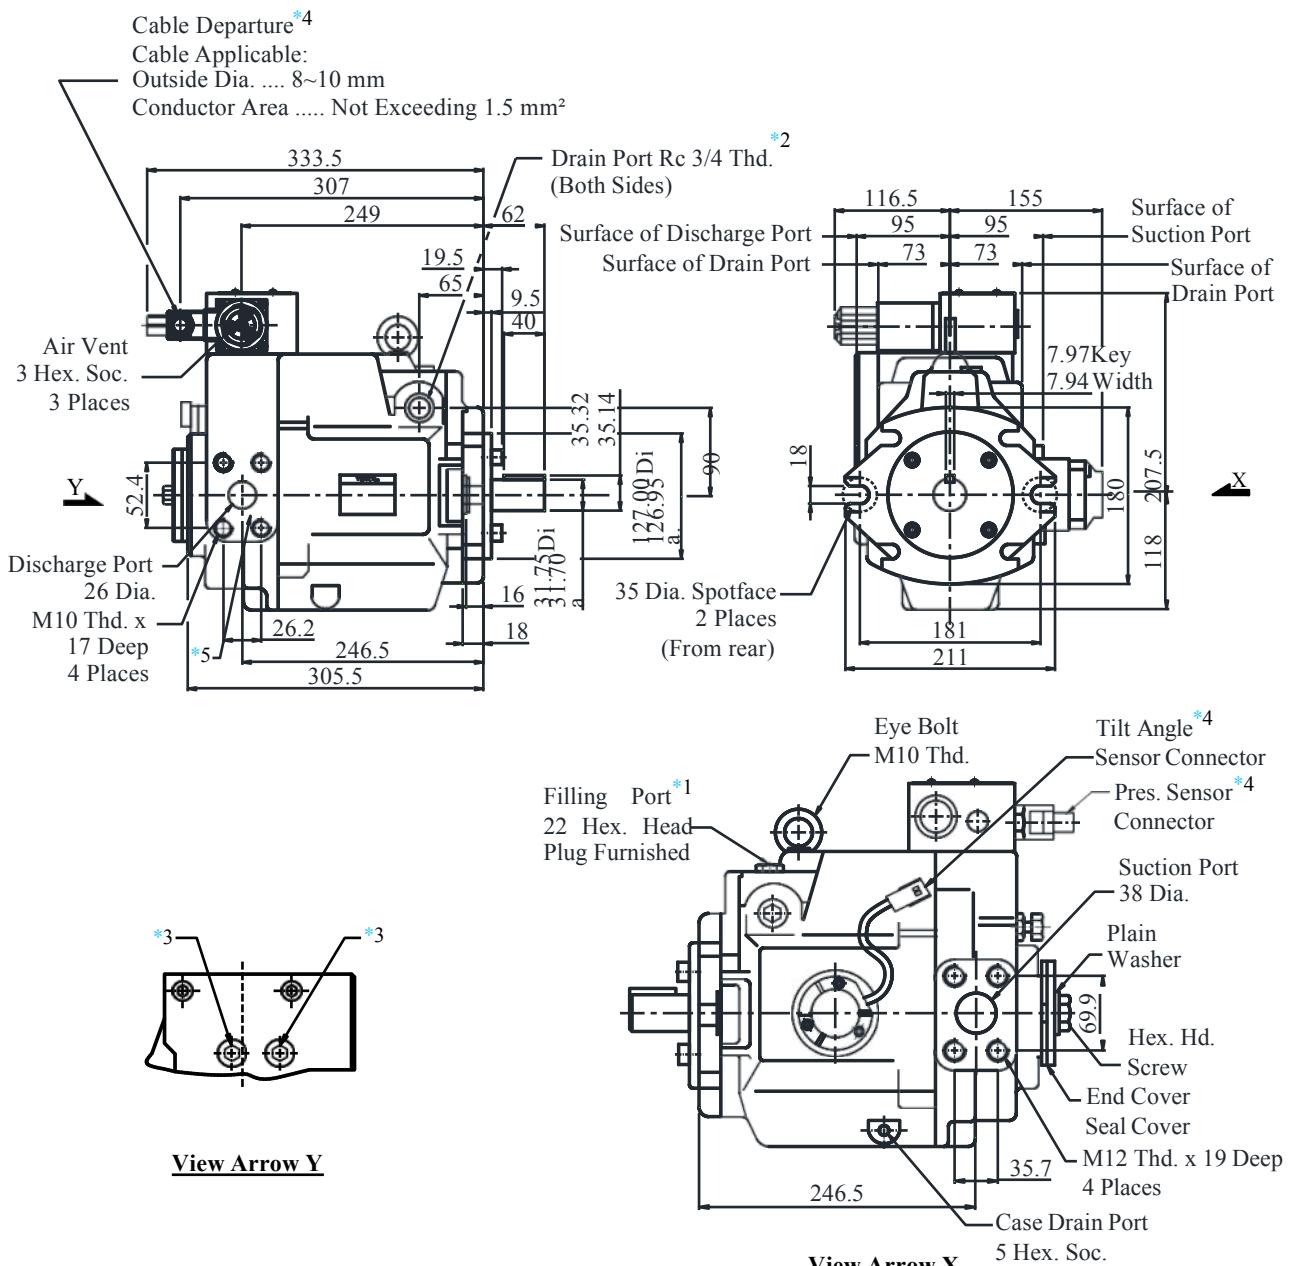

*¹ Install the pump so that the "Filling Port" is at the top.

*² Use either port of two drain ports at your option. Keep the remaining port plugged.

*³ Do not touch the screw because it is adjusted at the time of shipment.

*⁴ For cable connection with amplifiers, see page 65.

*⁵ If you do not use the special sequence valve, plug the port (FP-SC-1/32)

DIMENSIONS IN
MILLIMETRES


- Foot Mounting type

Note : For Foot Mounting Type refer page no. 52.

**"A" Series Variable Displacement Piston Pumps Single Pump,
Proportional Electro-Hydraulic Pressure & Flow Control Type**

- A90-FR04E※※-60-60
- A100-FR04E※※-60-10

- Flange Mounting

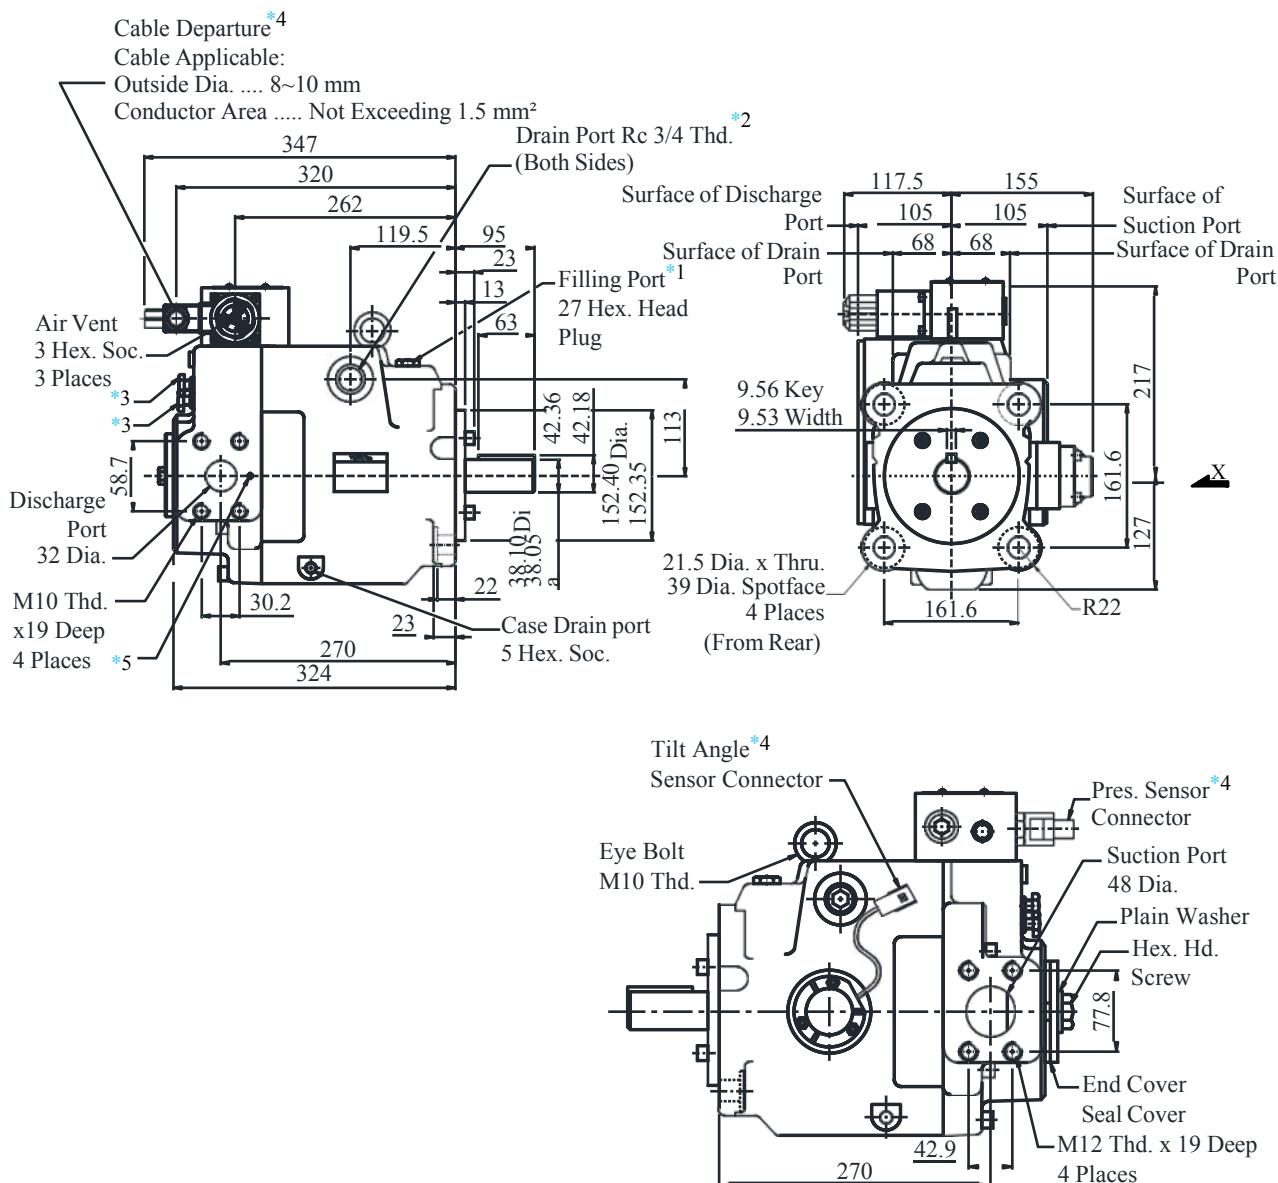

*¹ Install the pump so that the "Filling Port" is at the top.

*² Use either port of two drain ports at your option. Keep the remaining port plugged.

*³ Do not touch the screw because it is adjusted at the time of shipment.

*⁴ For cable connection with amplifiers, see page 65.

*⁵ If you do not use the special sequence valve, plug the port (FP-SC-1/32)

DIMENSIONS IN MILLIMETRES

- Foot Mounting type


Note : For Foot Mounting Type refer page no. 53.

A

"A" Series Variable
Displacement Piston Pumps

A145-FR04E※※-60-60

- Flange Mounting

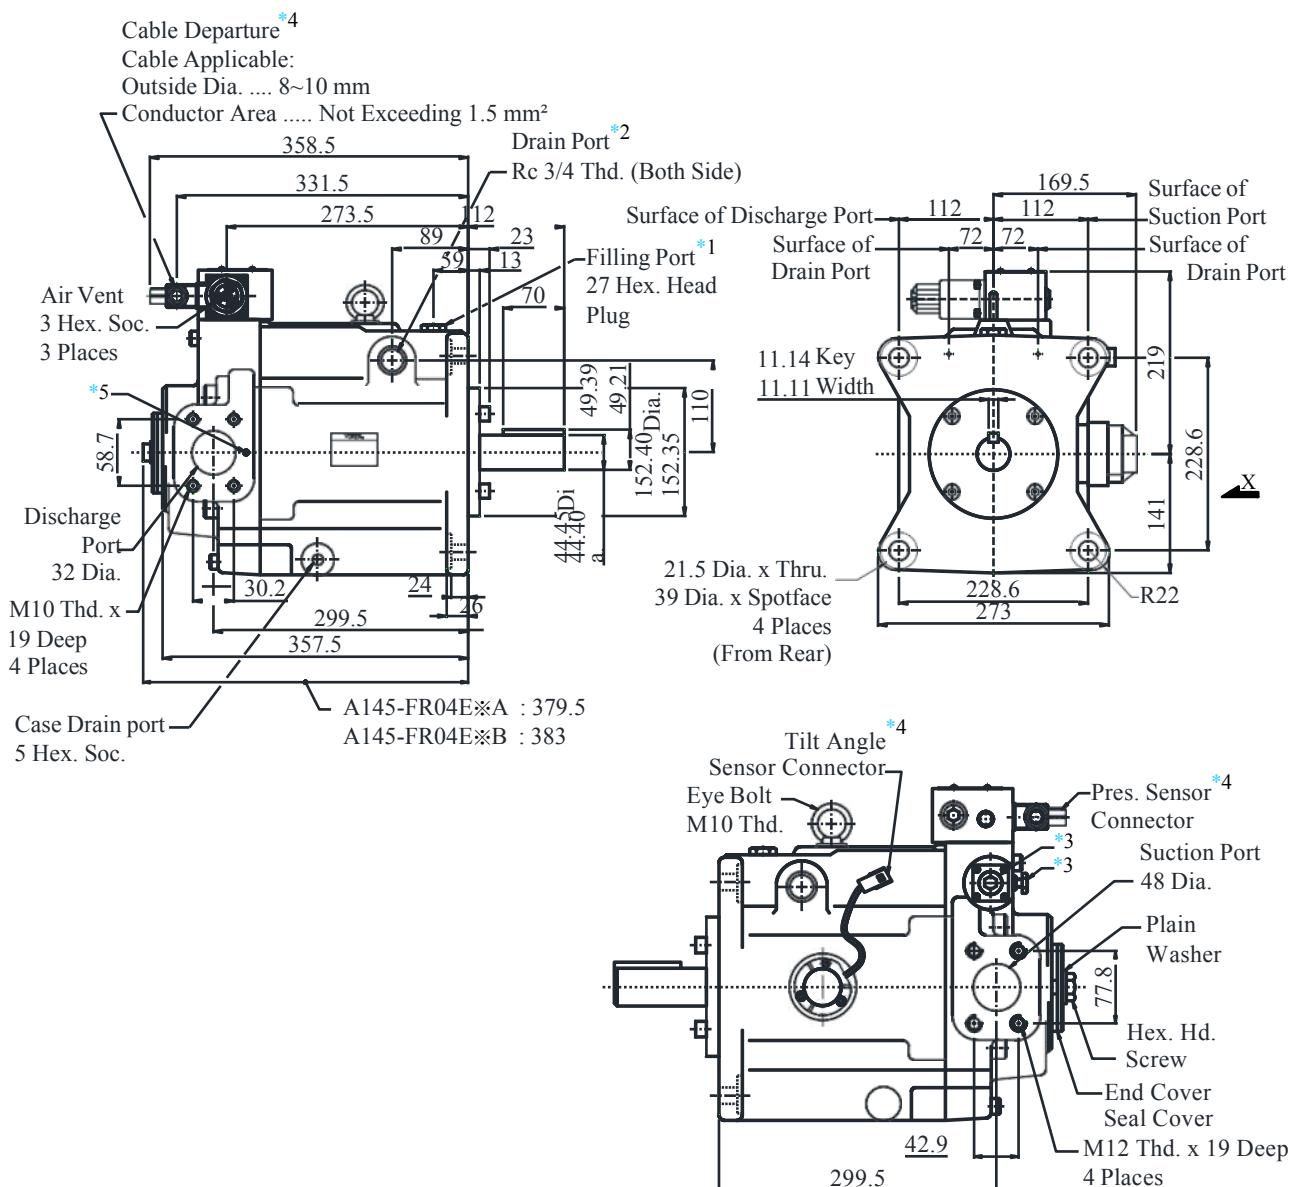

*¹ Install the pump so that the "Filling Port" is at the top.

*² Use either port of two drain ports at your option. Keep the remaining port plugged.

*³ Do not touch the screw because it is adjusted at the time of shipment.

*⁴ For cable connection with amplifiers, see page 65.

*⁵ If you do not use the special sequence valve, plug the port (FP-SC-1/32)

DIMENSIONS IN
MILLIMETRES

- Foot Mounting type


Note : For Foot Mounting Type refer page no. 55.

**"A" Series Variable Displacement Piston Pumps Single Pump,
Electro-Hydraulic Proportional Pressure & Flow Control Type**

Cable Connection between Pump and Amplifier

The cable connections between the proportional pilot valve and the sensor of the pump and the attached amplifier (SK1106) are shown below.

The cable assemblies are not included in the pump assembly. Purchase separately with model numbers described in the below table, if required.

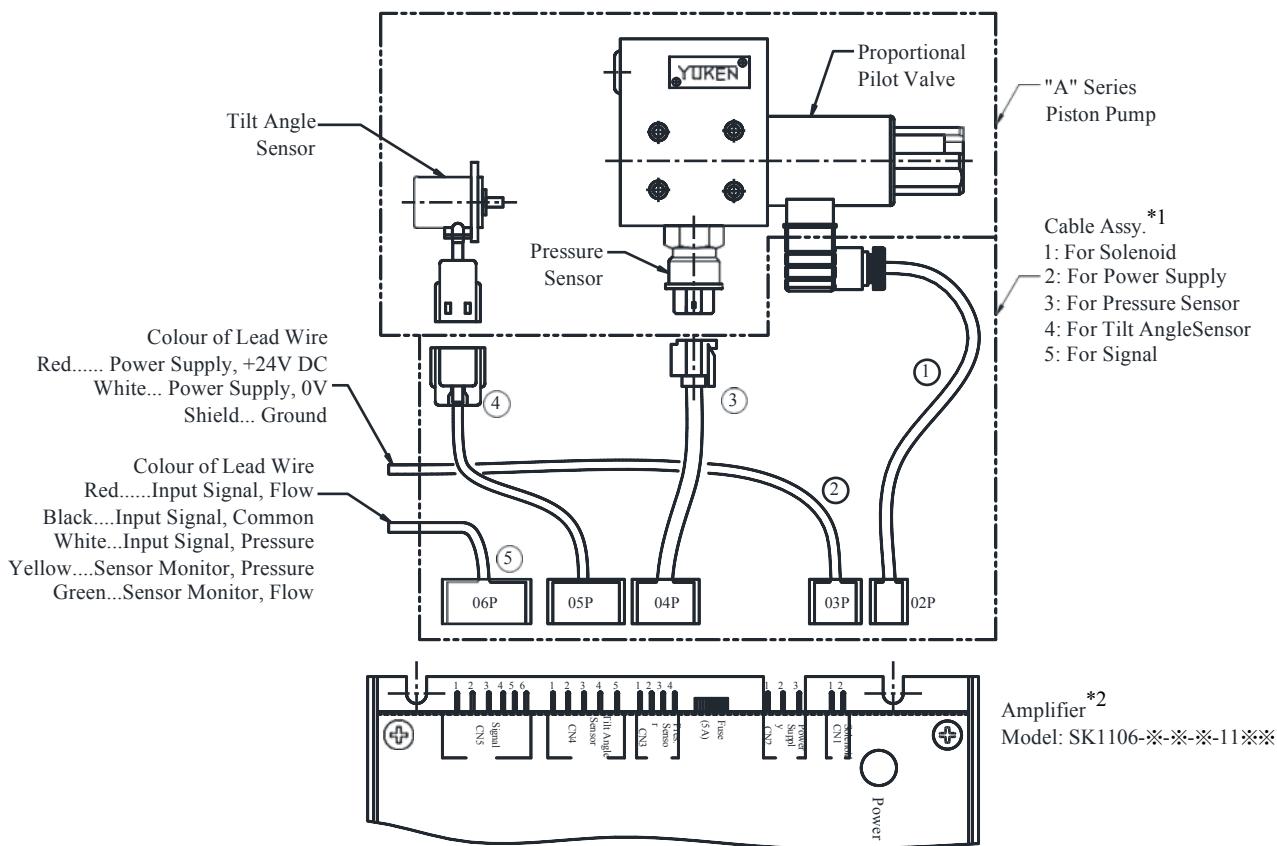

*¹ Cable assemblies are available. When ordering, specify the cable ass'y model numbers from the table below.

Name of Cable Ass'y	Cable Ass'y Model Numbers		
	Approx. Length of Cable mm		
	2000	5000	10000
1 For Solenoid	SK1112-S-2-10	SK1112-S-5-10	SK1112-S-10-10
2 For Power Supply	SK1112-V-2-10	SK1112-V-5-10	SK1112-V-10-10
3 For Pressure Sensor	SK1112-P-2-10	SK1112-P-5-10	SK1112-P-10-10
4 For Tilt Angle Sensor	SK1112-Q-2-10	SK1112-Q-5-10	SK1112-Q-10-10
5 For Signal	SK1112-C-2-10	SK1112-C-5-10	SK1112-C-10-10

*² For the details of amplifier, see the following page.

Amplifier for Electro-Hydraulic Proportional Pressure & Flow Control Type Pumps (SK1106-★-※-※-10)


Specifications

Description	Model No.
	SK1106-★-※-※-10
Applicable Coil Resistance	10Ω (at 20°C)
Input Impedance	10 kΩ (PIN, QIN)
Power Supply	24 VDC (21-28 V Included Ripple)
Power Input (Max.)	30 W
Input Signal	Max. Flow/5V (QIN), Specified Pres./5V (PIN)
Output Signal for sensor monitor	5V/Max. Flow (SMQ), 5V/Specified Pres. (SMP)
Ambient Temperature	0 - 50°C
Approximate Mass.	450 g

List of Amplifier Model No.


Pump Model Number	Amplifier Model Numbers
A16-※R04E★-06-42	SK1106-★-16-06-10
A22-※R04E★-11-42	SK1106-★-22-11-10
A37-※R04E★-01-42	SK1106-★-37-01-10
A56-※R04E★-02-42	SK1106-★-56-02-10
A70-※R04E★-※-60-60	SK1106-★-70-60-10
A90-※R04E★-※-60-60	SK1106-★-91-60-10
A145-※R04E★-※-60-60	SK1106-★-145-60-10

Note: The symbol “★” shown with pump and amplifier model numbers, is the control pressure at input signal of 5 V.

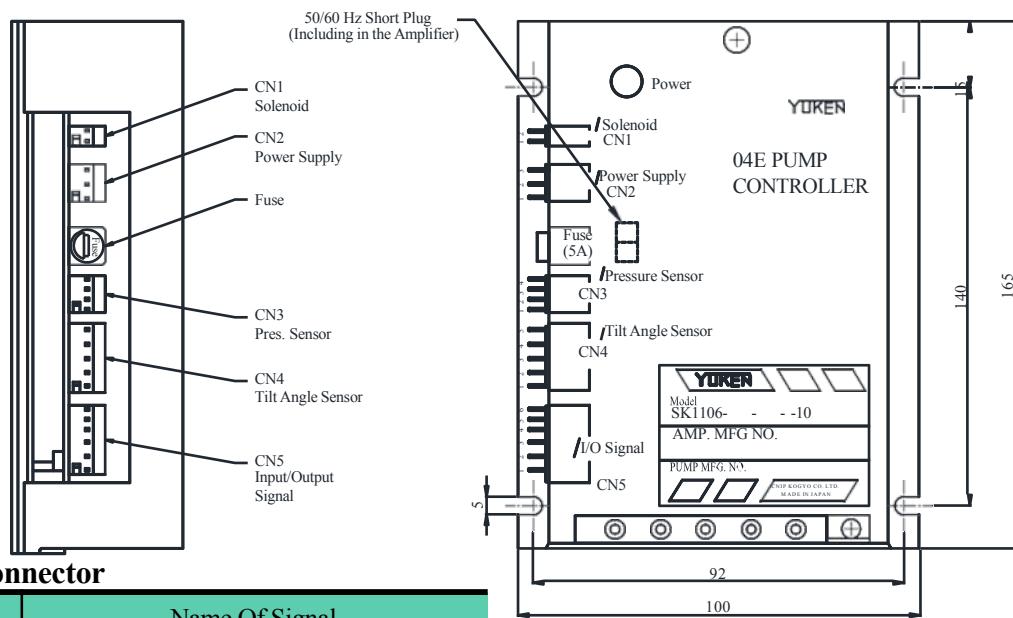

Detail of Connector

Connector	Name Of Signal	
CN1 Solenoid	1	Output to pilot valve solenoid
	2	
CN2 Power Supply	1	0 [V] (0V)
	2	+24 [V] (24V)
	3	0 [V]
CN3 Pres. Sensor	1	+5 [V]
	2	0 [V]
	3	Input Signal- Sensor
	4	0 [V]
CN4 Tilt Angle Sensor	1	+8 [V]
	2	0 [V]
	3	Power supply for sensor
	4	Input Signal- Sensor
	5	0 [V]
CN5 Input/output Signal	1	Input Signal-Flow (Qin)
	2	Input Signal-Common (COM)
	3	Input Signal-Pres. (Pin)
	4	Output Signal-Sensor Monitor P (SMP)
	5	Output Signal-Sensor Monitor Q(SMQ)
	6	0 [V]

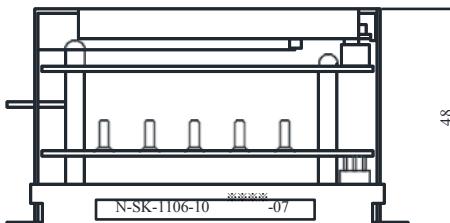

**“A” Series Variable Displacement Piston Pumps Single Pump,
Electro-Hydraulic Proportional Pressure & Flow Control Type**